

	LISTING PAGE	ILLUS/ FIGURE
Valve, air distribution	1634	403
Distribution installation, hot air	1636	404
Distribution installation, hot air right-hand section	1638	405
Distribution installation, hot air forward section	1644	406
Valve assembly, heating selector	1648	407
Sensor, air distribution	1650	408
Valve assembly, heating air bleed	1652	409
Deleted	1654	410
Deleted	1656	411
Deleted	1658	412
 FUNCTIONAL GROUP 14 HOIST AND WINCHES		
Suspension installation, cargo	1660	414
Suspension assembly	1664	416
Hook, external cargo	1668	416A
Release assembly, cargo	1672	417
Case and cover assembly	1676	418
Deleted	1678	419
Deleted	1682	420
Deleted	1686	421
Deleted	1688	422
Deleted	1694	423
Deleted	1696	423A
Deleted	1698	423B
Deleted	1704	423C
Deleted	1710	423D
Deleted	1712	423E
Deleted	1718	423F
Deleted	1722	423G
Deleted	1728	423H
Deleted	1730	423I
Deleted	1732	423J
Deleted	1734	423M
 FUNCTIONAL GROUP 16 MISSION EQUIPMENT		
Smoke generator seat, lines and tank tie down installation	1736	424
Curtain installation, blackout	1740	425
Curtain installation, blackout	1742	426
Cable installation, paratroop static line	1744	427
Support assembly, external stores	1746	428
Installation kit auxiliary equipment	1750	429
Cabin cargo, area, miscellaneous items installation	1754	429A
Heat suppression installation	1760	430
Armament installation, XM6E3	1764	432
Armament installation, M6	1768	433
Armament installation, M5 grenade launcher	1772	434
Rack, bomb, aircraft	1780	435
Armament installation	1788	436
Armament installation, M56	1794	437
M23 Mount Assembly	1794.4	437A
Kit installation, DME	1794.6	437B