

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG NO.	(B) ITEM NO.	SVR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	U/M	QTY INC IN UNIT
						USABLE ON CODE		
226	361	PAOFF	1680-00-759-8274	98182	4408-100-45	.PANEL ASSEMBLY-WORD CAUTION CONTROL SEE FIG.233 FOR BREAK-DOWN, U/O 205-075-036-1.-3.-7.-9.-11.-15.-17 UHH,UHV	EA	1
226	361	PAOFF	1680-00-850-4361	98182	141-10450-045	.PANEL, FAULT-FUNCTION CAUTION CONTROL SEE FIG.234 FOR BREAK-DOWN, U/O 205-075-036-1.-3.-7.-9.-11.-15.-17 UHH,UHV	EA	1
226	362	AOOOZ	1560-00-987-5254	97499	205-075-407-5	.CABLE ASSY, HYDRAULIC CAUTION CONTROL U/O 205-075-008-1, 205-075-008-1,-9,-9, 205-075-013-1, & -3 UHH,UHV	EA	1
226	363	AOOOZ	6150-00-924-0443	97499	205-075-432-9	.CABLE ASSY, HYDRAULIC CONTROL PANEL U/O 205-075-018-1.-3, 205-075-032-1,-3,-9,-13,-15, 205-075-036-1.-3.-7.-9, & -11 UHH,UHV	EA	1
226	364	PAOZZ	5935-00-223-0572	96906	MS3057-12A	.ADAPTER, CABLE CLAMP U/O PN 205-075-407-5 UHH,UHV	EA	1
226	365	PAOZZ	5940-00-813-0698	96906	MS25036-101	.TERMINAL, LUG U/O PN 205-075-432-9 UHH,UHV	EA	2
226	366	PAOZZ	5940-00-204-8966	96906	MS25036-102	.TERMINAL, LUG U/O PN 205-075-407-5 UHH,UHV	EA	1
226	367	PAOZZ	5940-00-143-4771	96906	MS25036-103	.TERMINAL, LUG UHH,UHV	EA	1
226	368	PAOZZ	5940-00-557-1629	96906	MS25036-149	.TERMINAL, LUG UHH,UHV	EA	1
226	369	PAOZZ	5935-00-626-3120	96906	MS3456W20-27S	.CONNECTOR, PLUG, ELEC UHH,UHV	EA	1
226	369A	PAOZZ	5935-00-626-3120	96906	MS3456W20-27S	.CONNECTOR, PLUG, ELEC UHH,UHV	EA	1
226	370	PAOZZ	5935-00-814-4127	96906	MS3108R10SL4S	.CONNECTOR, PLUG, ELEC UHH,UHV	EA	1
226	371	PAOZZ	5940-01-079-1647	81349	M7928/5-3	.SPLICE, CONDUCTOR U/O PN 205-075-407-5 UHH,UHV	EA	1
226	371	PAOZZ	5940-01-079-1647	81349	M7928/5-3	.SPLICE, CONDUCTOR U/O PN 205-075-432-9 UHH,UHV	EA	3
226	372	XDOZZ		97499	85T4-7-2	.INSULATION TUBE UHH,UHV	FT	8
226	373	PAOZZ	5365-00-598-5416	96906	MS3420-12	.BUSHING, RUBBER U/O PN 205-075-407-5 UHH,UHV	EA	1
226	374	PBOZZ	6145-00-851-8505	96906	MS25190B20	.WIRE, ELECTRICAL UHH,UHV	FT	
226	375	PBOOO	1560-00-915-5926	97499	205-075-207-1	.PANELX ASSEMBLY CONT HYDRAULIC U/O 205-075-018-1, & -3 UHH,UHV	EA	1
226	375	PAOOO	1680-00-179-8009	97499	205-075-210-7	.PANEL CONTROL, ELECT ELECTRICAL-HYDRAULIC U/O 205-075-032-1,-3,-9, -13,-15, & 205-075-036-1, & -11 UHH,UHV	EA	1
226	375	PAOOO	1680-00-168-5672	97499	204-075-827-3	.PANEL, INDICATING, LI LIGHT TRANSMITTING U/O 205-075-036-3,-7,-9 UHH,UHV	EA	1
226	376	PBOOO	6110-00-916-2559	97499	205-075-205-5	.PANEL ASSEMBLY, CONT ENGINE U/O 205-075-018-1, & -3 SEE FIG.290 FOR BREAKDOWN UHH,UHV	EA	1
226	376	PBOOO	6110-00-105-8255	97499	205-075-205-7	.PANEL ASSEMBLY, CONT ENGINE U/O 205-075-032-1 SEE FIG.260 FOR BREAKDOWN UHH,UHV	EA	1
226	376	PAOOO	6110-00-168-3807	97499	205-075-251-1	.PANEL ASSY, CONTROL ENGINE U/O 205-075-032-3,-9,-13,-15 & 205-075-036-1,-3,-7 & -9 SEE FIG.263 FOR BREAKDOWN UHH,UHV	EA	1
226	376	XBOOZ	6110-00-168-9005	97499	205-075-251-5	.PANEL CONTROL CONTROL U/O 205-075-036-11 SEE FIG.263 FOR BREAKDOWN OWN UHH,UHV	EA	1
226	377	AOOOZ	1560-00-567-3019	97499	205-075-410-1	.CABLE ASSY, ENGINE PANEL U/O PN 205-075-008-1 UHH,UHV	EA	1
226	377	AOOOZ	1560-00-567-3031	97499	205-075-410-7	.CABLE ASSY, ENGINE PANEL U/O PN 205-075-008-1,-3, & -5 UHH,UHV	EA	1
226	377	AOOOZ	1560-00-906-0279	97499	205-075-410-11	.CABLE ASSY, ENGINE PANEL U/O PN 205-075-013-1 & -3 UHH,UHV	EA	1
226	377	AOOOZ	6150-00-916-2587	97499	205-075-410-15	.CABLE ASSY, ENGINE PANEL U/O PN 205-075-018-1,-3, & 205-075-032-1 UHH,UHV	EA	1
226	377	AOOOZ	6150-00-989-0046	97499	205-075-410-17	.CABLE ASSY, ENGINE PANEL U/O PN 205-075-032-3,-13, & -15 UHH,UHV	EA	1
226	377	AOOOO		97499	205-075-901-3	.CABLE ASSY, ENGINE CONTROL PANEL U/O PN 205-075-032-9, 205-075-036-1,-3, & -7 UHH,UHV	EA	1
226	377	AOOOO		97499	205-075-901-5	.CABLE ASSY, ENGINE CONTROL PANEL U/O PN 205-075-036-9 UHH,UHV	EA	1