

Table 1-8. Overhaul and Retirement Schedule (Cont)

AREA	OVERHAUL INTERVAL (HOURS)	RETIREMENT INTERVAL (HOURS)	ITEM AND PART NUMBER
4	1100		Transmission
	2000		Transmission Assembly 204-040-016-1, -3
			Transmission Assembly 204-040-016-5
4	1500		Main Input Quill Assembly 205-040-263-3, -111
	1500		Mast Assembly 204-040-366-9, -15
		1500	Mast Bearing AMM9122-44-101
		1500	Bearing 204-040-136-7, -9
		1500	Bearing 212-040-136-1
		1500	Mast Assembly 204-011-450-105
		1500	Mast Assembly 204-011-450-7
		Deleted	Tail Rotor & Drive System Deleted
		1100	Blade Assembly 204-011-702-11
		1200	Blade Assembly 204-011-702-15
6		300	Grip Assembly 204-011-728-1
6		300	Grip Assembly 204-011-728-19
6		2500	Grip Assembly 205-011-711-101
		1500	Yoke Assembly 204-011-722-5
	1500	Deleted	Gearbox, 42° 204-040-003-7, -13, -19, -23, -29
		3000	Slider, Tail Rotor 204-010-720-3
		250	Slider, Tail Rotor 204-010-720-3 (CAGE OHOW5) I/A/W TB 1-1520-210-20-38
		*****600	Bearing Hanger 204-040-623-5 or PAM9107NPPA2702
	1200		Gearbox, 90° 204-040-012-7
	600		Gearbox, 90° 204-040-012-1
			Main Rotor Mast Controls
	1200		Swashplate & Support Assy 204-011-400-11
		3300	Support 204-011-404-1
		3600	Support 204-011-404-5
		500	Pin 204-011-446-3
		4800	Collective Lever 212-010-403-5
		1000	Collective Lever 204-011-438-1
		3600	Scissors Assembly 204-011-406-1/9/13/15
4	1100		Scissors and Sleeve Assy 204-011-401-1/7/9
4	1200		Scissors and Sleeve Assy 204-011-401-11