

	LISTING PAGE	ILLUS/ FIGURE
Stick assembly	1438	357
Control installation, fore and aft and lateral cyclic	1440	358
Cyclic installation, fore and aft and lateral center section	1444	359
Lever assembly	1448	360
Control installation, lateral cyclic aft section	1450	361
Control installation, fore and aft and lateral cyclic	1454	362
Deleted	1458	363
Control installation, tail rotor forward section	1462	364
Deleted	1466	365
Deleted	1470	365A
Deleted	1474	366
Control installation, tail rotor forward aft section	1478	367
Cylinder and support assembly, anti-torque	1482	368
Adjuster assembly	1486	369
Deleted	1490	371
Cable installation, tail rotor control	1494	372
Cable installation, tail rotor control aft	1496	373
Deleted	1500	375
Control installation, synchronized elevator forward	1504	376
Deleted	1508	377
Control installation, synchronized elevator aft	1512	378
Elevator installation, synchronized	1514	379
FUNCTIONAL GROUP 12 UTILITY SYSTEMS		
Mirror installation	1518	380
Wiper installation, windshield	1520	381
Motor assembly	1524	382
Converter assembly	1526	383
Deleted	1528	384
Detection system installation and valve installation, engine bleed air	1532	385
Valve assembly	1536	386
Switch assembly	1540	387
FUNCTIONAL GROUP 13 ENVIRONMENTAL CONTROL SYSTEMS		
Distribution installation, hot air left-hand section	1578	388
Distribution system installation, forward section	1582	389
Deleted	1586	390
Deleted	1588	391
Distribution system installation, aft section	1592	392
Deleted	1598	393
Deleted	1602	394
Deleted	1606	395
Heater kit, auxiliary	1610	396
Valve, mixing	1616	397
Valve, mixing	1617	398
Blower unit	1620	398A
Deleted	1622	399
Deleted	1626	400
Distribution installation, hot air left-hand section	1630	401