

DO YOURSELF A FAVOR

Any time you Huey (UH-1D/H) mechs remove the transmission external oil filter head from the bracket, the 4 mounting bolts have to come off. No sweat.

When you put the head back, tho, lockwire the 4 bolts. That's the word in para 7-10 of TM 55-1520-210-20 (Sep 71). Make sure the bracket retaining bolts are also safetied.

Otherwise, vibration will loosen the bolts and crack the bracket.

