


TIME

STACKED RIGHT?

Take the tail rotor pitch change link stack-up with the new Kacarb bearing, for example.

With full right pedal and a partial flap of the tail rotor hub and blade, the inboard part of the bearing can contact the OD of the bolt washer—preventing the hub from hitting the static stop.

To prevent bearing damage, you can put spacer, P/N NAS43HT-4-8, between the bearing and the bolt washer on your Huey. Be sure you put the spacer side of the bearing inner race toward the threaded end of the bolt.

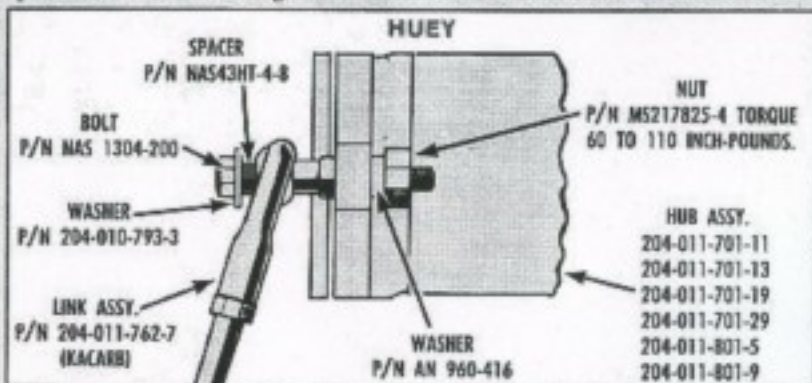

On the HueyCobra, make the spacer from washer, AN 960-C416, by opening up the ID to .013-.320 inch. Assembly is the same as for the Huey.

