

j. Remove shorting connector from cable cutter cartridge (48) (figure 14-16).

k. Install cable cutter harness (30) connector by threading into cable cutter receptacle.

l. Set aircraft position switch located on hoist control panel assembly to position corresponding with hoist installation in helicopter.

m. Open cabin ceiling soundproofing and connect input power cable (38).

n. Reinstall cabin ceiling soundproofing.

o. Deleted.

p. Perform operational checks, refer to TM 55-1680-320-23 & P.

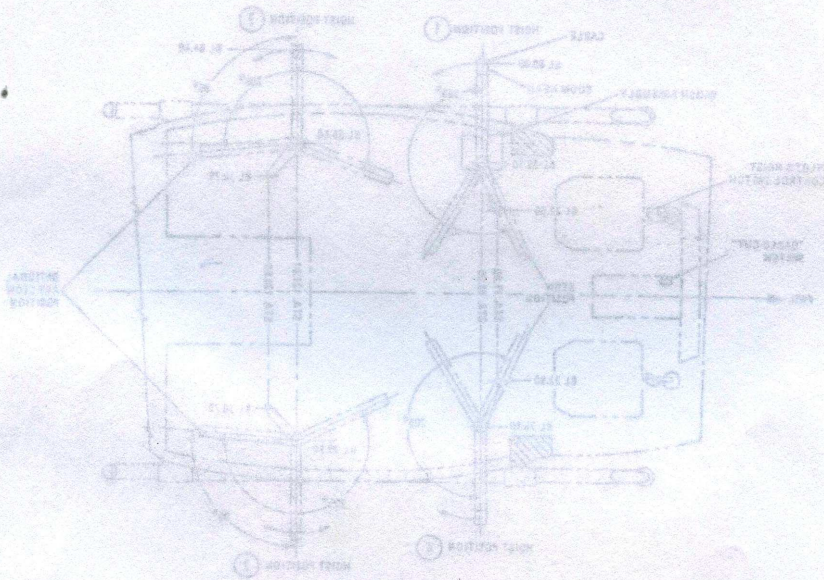


Figure 14-27. Hoist installation positions

Paragraphs 14-158 through 14-196 have been deleted.

Pages 14-67 through 14-81, including Figures 14-22 through 14-26 have been deleted.