

## Stop a Leaking Quill

If your Huey's transmission quill assembly is leaking oil, it could be a sign of a seal problem in the input drive quill.

To keep the seal from leaking in the future, do this before you install a new input drive quill (Para 6-108 of TM 55-1520-210-23-1):

1. Remove the freewheeling clutch assembly (Para 6-103).
2. Lubricate the seal (Item 10 of Fig 6-26), following the info in Para 6-107.

