


## AVOID THE RUB, BUB!

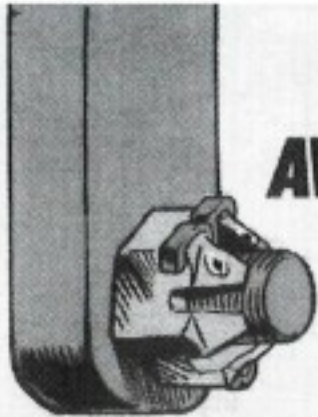

YOU'VE GOT YOUR COTTER PIN BENT WRONG.



When installing the stabilizer bar on your Huey (UH-1), hold one—when connecting the control tubes to the scissors levers.

You're operating in close quarters, between the levers. Any hardware sticking out could damage the scissors and sideline the bird.

Use 2 washers under the head of both upper and lower attaching bolts. Insert each bolt with the head in direction of rotation.

Add one washer under the nut. Torque the nut to the standard value and add the cotter pin. That's the rub . . . the cotter pin.

If there's any possibility of the cotter pin chafing the opposite scissors lever, put the cotter pin in with the head horizontal to the slot in the nut.

In other words, bend the cotter pin ends around the nut, not over the end of the bolt.

