
- (15) If removed during disassembly, reinstall washer (12) in gear case (11) and stake in place. Install insulator (9) in gear case and secure with sealing compound (C240).
- (16) Install gear case (11) and secure with three screws (10). Do not lockwire screws until final assembly.
- (17) Position brush and clip assemblies (28) in brush holders and secure with two screws (27) and lockwashers (30).
- (18) Position insulation (44) and cover and nameplate assembly (41) on barrel assembly. Secure with three screws (42) and lockwashers (43).

- (19) Install end cap (31). Secure with lockwire (C155).
- (20) Test electric motor assembly in accordance with paragraph 12-19.
- **12-18. Final Assembly** Windshield Wiper. The motor and converter assembly may be assembled in either the left or right configuration. Figure 12-7 illustrates both configurations and depicts the proper angular orientation of the electric motor assembly in respect to the converter assembly. Determine the desired configuration, then proceed as follows:
- a. Install nipple (21) in converter assembly (24, figure 12-2).

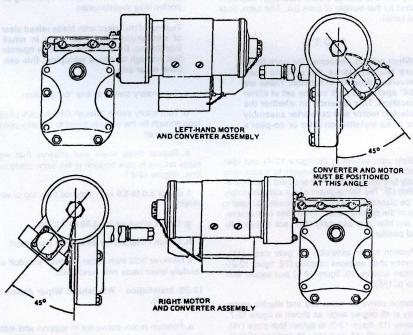

CONVERTOR AND MOTOR MUST BE POSITIONED AT THIS ANGLE.

Figure 12-7. Motor and Converter Assembly — Left & Right Configuration