



Focus on the cable cut switch guard. It has to be closed and secured with breakaway wire.



Check all electrical connectors and switches to make sure they're tight and undamaged.

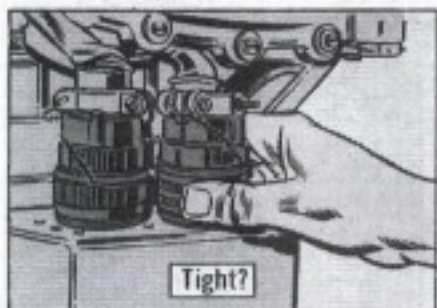

Press the press-to-test switch. Illumination means the light and electrical system are OK.

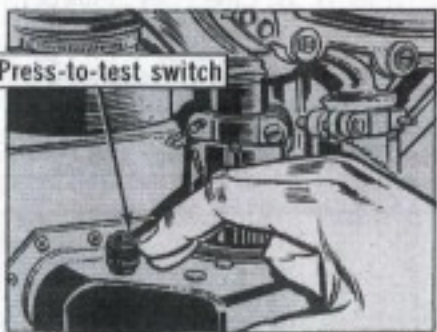

Check the winch oil level sight glass. Be sure you also keep the transmission oil level at the FULL mark.



Make sure TB 55-1680-326-20-1 and TB 55-1680-326-20-2 have been complied with on the hoist. Otherwise, the hoist status is a red-X.

For the operational check of your hoist, follow the info in Para 14-145.10, Page 14-47 of TM 55-1520-



210-23-2. Be sure the cable rewinds properly by viewing the drum thru the opening in the winch.