

# TAIL BOOM

**DON'T OVERLOOK A THING!**

**TAIL BOOM EXTERIOR**—Check for cracks, dents, corrosion.

**TAIL BOOM ATTACHING BOLTS**—Secure? Fittings cracked?

**ELEVATORS, TAIL SKID**—Use your mitts to check the elevator and the stinger for tightness.

**TAIL ROTOR (90°) GEAR-BOX**—Secure? No leaks? Oil level full?

**TAIL ROTOR HUB AND BLADE ASSEMBLY**—Secure? No visible damage?

**TAIL ROTOR DRIVE SHAFT ASSEMBLY**—Check security of shafts, hangers, coupling clamps (installed 90° apart for proper balance) and covers.

**INTERMEDIATE (42°) GEARBOX**—Secure? No leaks? Oil level full?

**FUEL, OIL, HYDRAULIC FLUID**—Service your Huey at all the places shown in Fig 1-6 of your organizational maintenance manual. You will find the poop on these operations, beginning in para 1-67.

**SERVICE, WITH A SMILE**

The slide-in handle is the baby to use for moving your bird, sure 'nuff.

USE THIS! DANGER NOT THIS!

**INSPECTOR'S STAMP HERE:**

**MORE**