TM TM 55-1520-210-23-3

TM 55-4920-201-14	Operator's Organizational. DS and GS Maintenance Manual Including Repair Parts and Special Tools List: Balancing and Adapter Kits (Marvel)
TM 55-4920-244-14	Operator's Organizational. Direct Support and General Support Maintenance Manual
TM 750-244-1-5	Procedures for Destruction of Aircraft and Associated Equipment to Prevent Enemy Use
MIL-STD-2073-1	Standard Practice for Military Packaging