


CHANGE THE GASKET ALSO

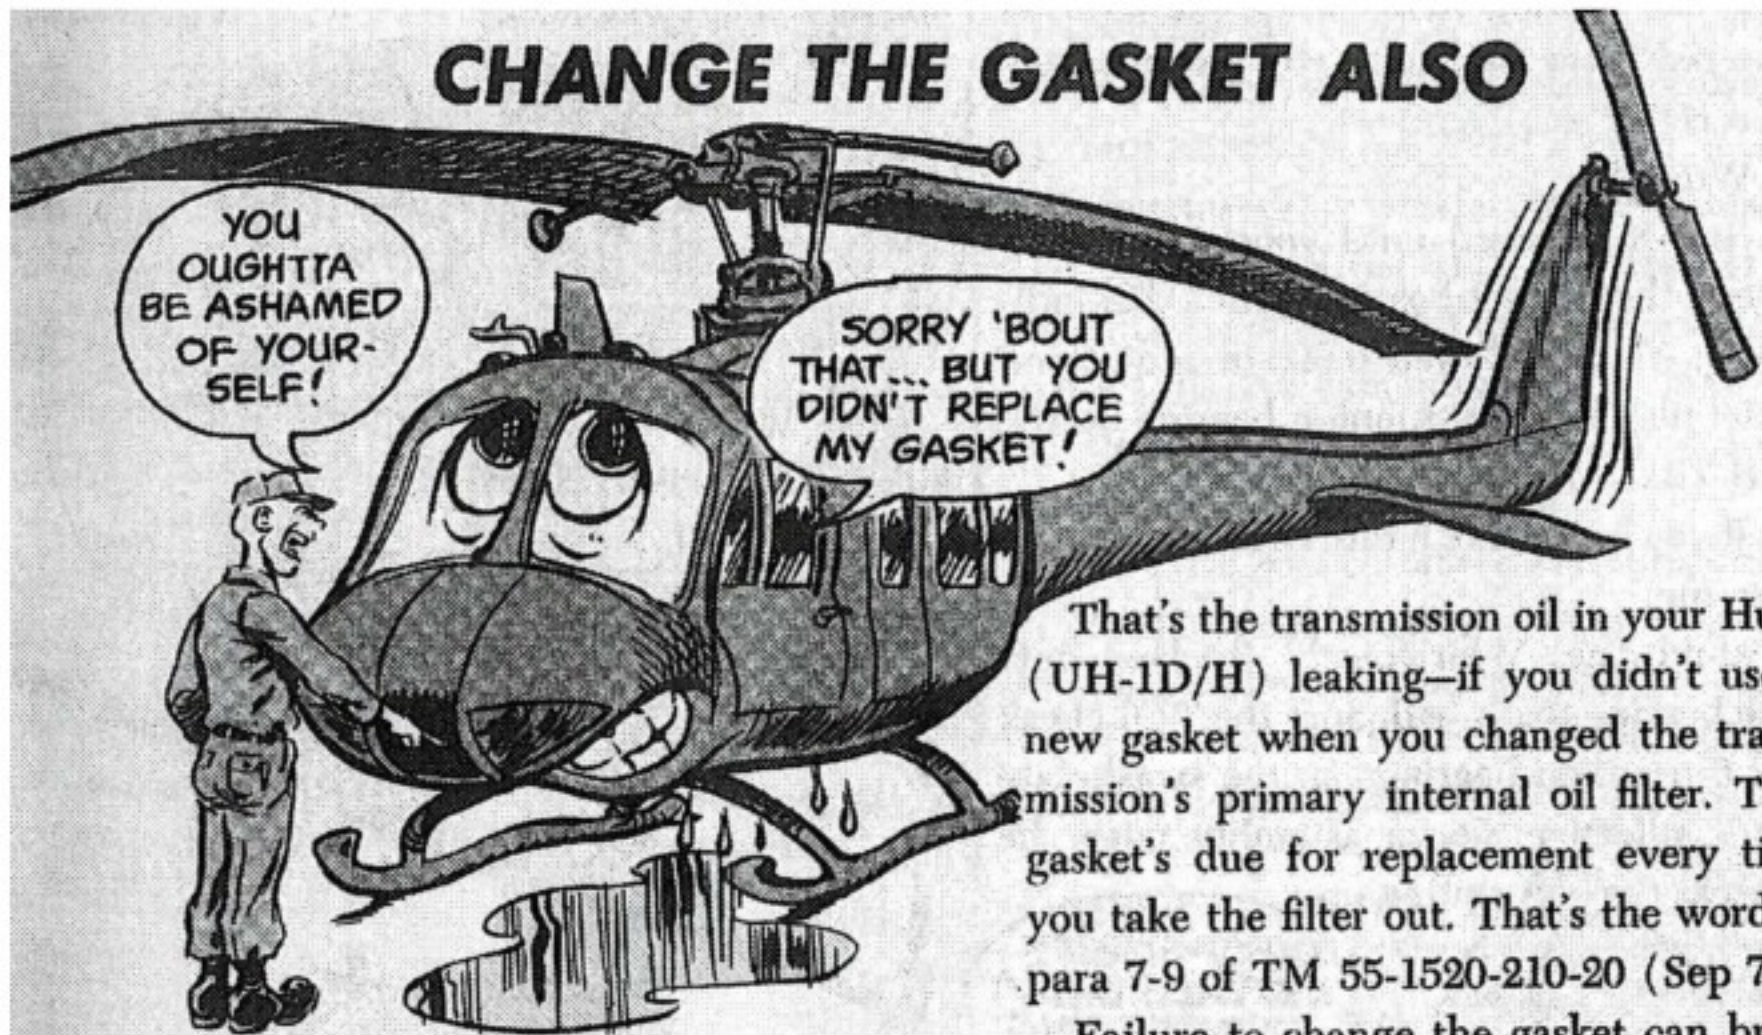

Drip . . . drip . . . drip.
No, that's not a leaky water faucet.

That's the transmission oil in your Huey (UH-1D/H) leaking—if you didn't use a new gasket when you changed the transmission's primary internal oil filter. That gasket's due for replacement every time you take the filter out. That's the word in para 7-9 of TM 55-1520-210-20 (Sep 71).

Failure to change the gasket can bring about bad things like emergency landings, due to loss of oil.