


# Clamp 'em Together

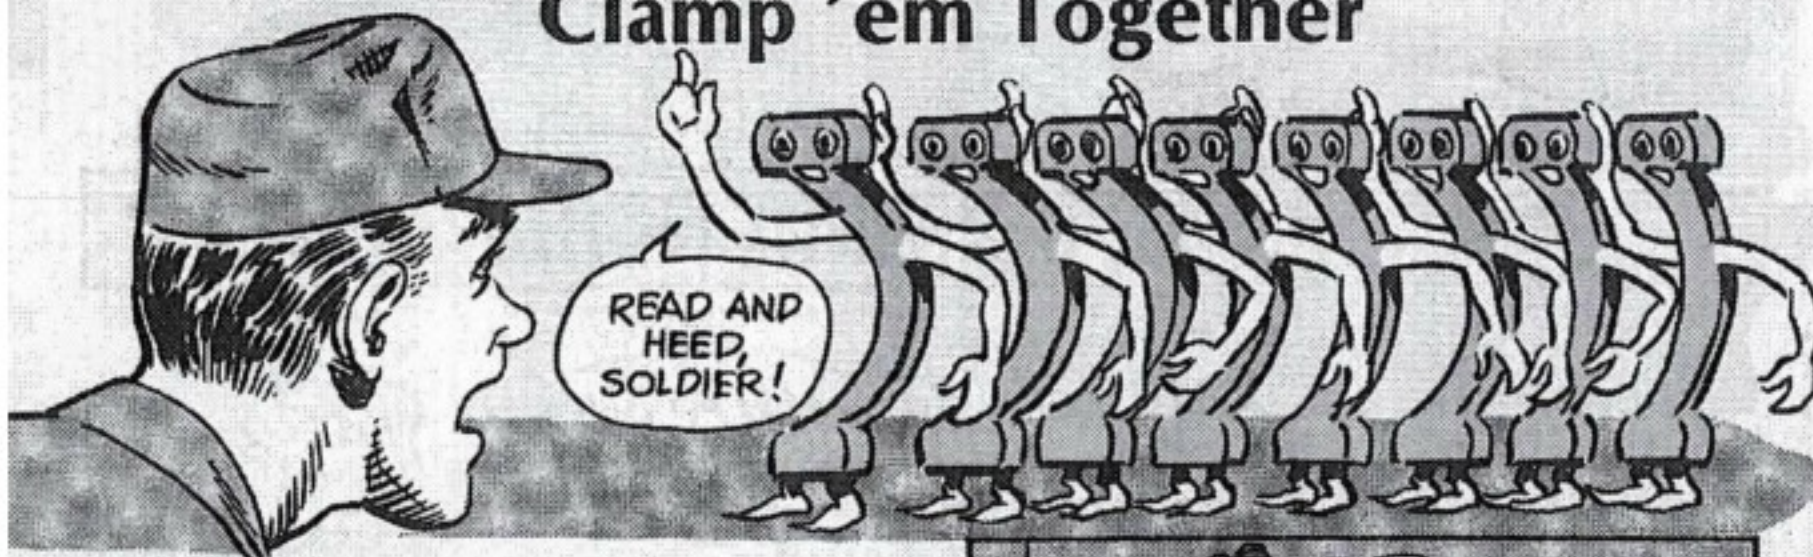

When you remove the tail rotor drive shafts on your Huey or Cobra, you want to keep the 2 numbered coupling clamp halves together because they're a matched set.

You won't upset the apple cart during installation if you bolt the halves together and retain 'em within one clamp.

Try it—you'll like it!

