



Due to the constant mis-match of holes in replacement skid shoes with the holes in skid tubes, UH-1D/H shoes now come thru without drilled ears.




First-off, remove the skid tube and take off the faulty shoe.

Mark extended vertical and horizontal center lines at each attaching tube hole.

Next, place the new shoe on the tube so that each ear is above a mounting hole. Mark each ear by extending the horizontal and vertical center lines you made on the tube.

Remove the shoe, center punch, and then drill  $\frac{1}{4}$ -in attaching holes where the center lines cross.

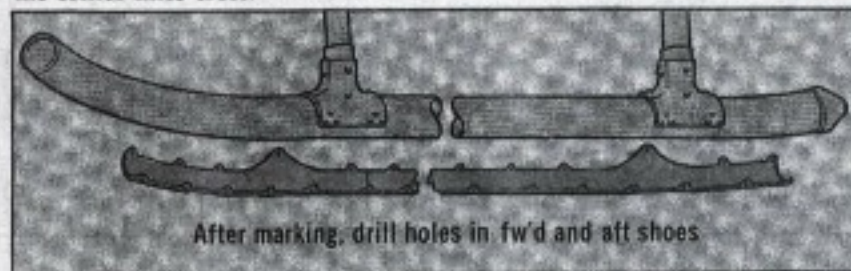

After marking, drill holes in fwd and aft shoes

Install the shoe with the removed hardware, put the skid tube back on your bird and you've got it made in the shade...with a perfect fit!