




Take the hose off and look thru it like you're about to discover something—like a shorter mini skirt—you are!! You'll notice that the material has been twisted, restricting the fluid flow . . . the hose has had it.

Never let a crease in a hose fool you, either. The unseen material under the wire braid is kinked. Your bird's in a bind when the oil supply is even partially choked off.

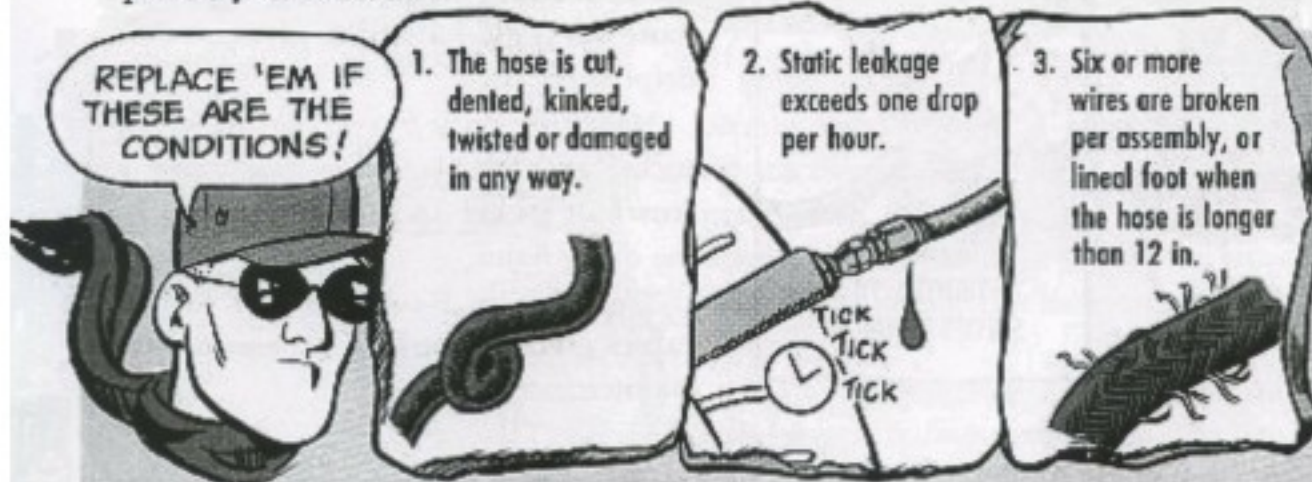

4. Two or more wires are broken in a single plait.

Yessir-e-e-e, those slim jobs are really built. Never mistreat 'em and they'll deliver for you.