

TM 55-1520-210-PMD

**TECHNICAL MANUAL
UH-1H/V HELICOPTER
PREVENTATIVE MAINTENANCE
DAILY INSPECTION CHECKLIST**

Distribution Statement A: Approved for public release; distribution is unlimited.

**HEADQUARTERS
DEPARTMENT OF THE ARMY**

11 JANUARY 1983

CHANGE
NO. 14

Headquarters
Department of the Army
Washington, D.C.,
30 April 2009

TECHNICAL MANUAL
UH-1H/V HELICOPTER
PREVENTATIVE MAINTENANCE
DAILY INSPECTION CHECKLIST

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TM 55-1520-210-PMD, 11 January 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by miniature pointing hands.

Remove Pages

A and B

1 through 4

13 and 14

17 and 18

23/(24 Blank)

Cover

Insert Pages

A and B

1 through 4

13 and 14

17 and 18

23/(24 Blank)

Cover

2. Retain this sheet in front of manual for reference purposes.

TM 55-1520-210-PMD
C14

By Order of the Secretary of the Army:

Official:

A handwritten signature in black ink that reads "Joyce E. Morrow". The signature is written in a cursive style with a large, stylized initial "J".

JOYCE E. MORROW
*Administrative Assistant to the
Secretary of the Army*
0909807

GEORGE W. CASEY, JR.
*General, United States Army
Chief of Staff*

Distribution:

**To be distributed in accordance with the initial distribution number (IDN) 311431,
requirements for TM 55-1520-210-PMD.**

CHANGE

NO. 13

Headquarters
Department of the Army
Washington, D.C.,
1 AUGUST 2005

**UH-1H/V AND EH-1H/X AIRCRAFT
PREVENTATIVE MAINTENANCE
DAILY INSPECTION CHECKLIST**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TM 55-1520-210-PMD, 11 January 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by miniature pointing hands.

Remove Pages

A and B

11 and 12

Insert Pages

A and B

11 and 12

2. Retain this sheet in front of manual for reference purposes.

**TM 55-1520-210-PMD
C13**

By Order of the Secretary of the Army:

PETER J. SCHOOMAKER
General, United States Army
Chief of Staff

OFFICIAL:

SANDRA R. RILEY
Administrative Assistant to the
Secretary of the Army

0516703

DISTRIBUTION: To be distributed in accordance with Initial Distribution Number (IDN) 311431, requirements for TM 55-1520-210-PMD.

CHANGE

NO. 12

Headquarters
Department of the Army
Washington, D.C.,
24 May 2004

**UH-1H/V AND EH-1H/X AIRCRAFT
PREVENTATIVE MAINTENANCE
DAILY INSPECTION CHECKLIST**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TM 55-1520-210-PMD, 11 January 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by miniature pointing hands.

Remove Pages

A and B

19 and 20

Insert Pages

A and B

19 and 20

2. Retain this sheet in front of manual for reference purposes.

**TM 55-1520-210-PMD
C12**

By Order of the Secretary of the Army:

PETER J. SCHOOMAKER
General, United States Army
Chief of Staff

OFFICIAL:

JOEL B. HUDSON
Administrative Assistant to the
Secretary of the Army

0414003

DISTRIBUTION: To be distributed in accordance with Initial Distribution Number 311431, requirements for TM 55-1520-210-PMD.

CHANGE

NO. 11

Headquarters
Department of the Army
Washington, D.C.,
11 April 2003

**UH-1H/V AND EH-1H/X AIRCRAFT
PREVENTATIVE MAINTENANCE
DAILY INSPECTION CHECKLIST**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TM 55-1520-210-PMD, 11 January 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by miniature pointing hands.

Remove Pages

A and B

11 and 12

19 and 20

— — —

Insert Pages

A and B

11 and 12

19 and 20

Cover

2. Retain this sheet in front of manual for reference purposes.

TM 55-1520-210-PMD
C11

By Order of the Secretary of the Army:

ERIC K. SHINSEKI
General, United States Army
Chief of Staff

OFFICIAL:

JOEL B. HUDSON
Administrative Assistant to the
Secretary of the Army

0309203

DISTRIBUTION: To be distributed in accordance with Initial Distribution Number 311431, requirements for TM 55-1520-210-PMD.

CHANGE
NO. 10

Headquarters
Department of the Army
Washington, D.C.,
27 April 2001

**UH-1H/V AND EH-1H/X AIRCRAFT
PREVENTATIVE MAINTENANCE
DAILY INSPECTION CHECKLIST**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TM 55-1520-210-PMD, 11 January 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by miniature pointing hands.

Remove Pages

— — —

3 and 4

9 through 14

19 through 27/(28 blank)

Insert Pages

A and B

3 and 4

9 through 14

19 through 23/(24 blank)

2. Retain this sheet in front of manual for reference purposes.

**TM 55-1520-210-PMD
C10**

By Order of the Secretary of the Army:

ERIC K. SHINSEKI
General, United States Army
Chief of Staff

OFFICIAL:

JOEL B. HUDSON
Administrative Assistant to the
Secretary of the Army

0110705

DISTRIBUTION: To be distributed in accordance with Initial Distribution Number 311431, requirements for TM 55-1520-210-PMD.

CHANGE
NO. 9

Headquarters
Department of the Army
Washington, D.C.,
23 February 1996

**UH-1H/V AND EH-1H/X AIRCRAFT
PREVENTATIVE MAINTENANCE
DAILY INSPECTION CHECKLIST**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TM 55-1520-210-PMD, 11 January 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by miniature pointing hands.

Remove Pages

1 and 2

9 through 12

19 and 20

23 and 24

Insert Pages

1 and 2

9 through 12

19 and 20

— — —

2. Retain this sheet in front of manual for reference purposes.

**TM 55-1520-210-PMD
C9**

By Order of the Secretary of the Army:

DENNIS J. REIMER
General, United States Army
Chief of Staff

OFFICIAL:

YVONNE M. HARRISON

*Administrative Assistant to the
Secretary of the Army*

01311

DISTRIBUTION: To be distributed in accordance with DA Form 12-31-E, block no. 1431, PM requirements for TM 55-1520-210-PMD.

CHANGE

NO. 8

Headquarters
Department of the Army
Washington, D.C.,
11 September 1992

**UH-1H/V AND EH-1H/X AIRCRAFT
PREVENTATIVE MAINTENANCE
DAILY INSPECTION CHECKLIST**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TM 55-1520-210-PMD, 11 January 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by miniature pointing hands.

Remove Pages

1 through 4

7 and 8

11 and 12

23 and 24

Insert Pages

1 through 4

7 and 8

11 and 12

23 and 24

2. Retain this sheet in front of manual for reference purposes.

**TM 55-1520-210-PMD
C8**

By Order of the Secretary of the Army:

GORDON R. SULLIVAN
General, United States Army
Chief of Staff

OFFICIAL:

MILTON H. HAMILTON
Administrative Assistant to the
Secretary of the Army

02248

DISTRIBUTION: To be distributed in accordance with DA Form 12-31-E, block no. 1431, requirements for TM 55-1520-210-PMD

CHANGE
NO. 7

Headquarters
Department of the Army
Washington, D.C.,
14 August 1990

**UH-1H/V AND EH-1H/X AIRCRAFT
PREVENTATIVE MAINTENANCE
DAILY INSPECTION CHECKLIST**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TM 55-1520-210-PMD, 11 January 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by miniature pointing hands.

Remove Pages

17 and 18

— — —

Insert Pages

17 and 18

18.1/18.2

2. Retain this sheet in front of manual for reference purposes.

TM 55-1520-210-PMD
C7

By Order of the Secretary of the Army:

CARL E. VUONO
General, United States Army
Chief of Staff

OFFICIAL:

WILLIAM J. MEEHAN II
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION: To be distributed in accordance with DA Form 12-31, PM requirements for UH-1H/UH-1V Helicopter, Utility; EH-1H Helicopter, Electronic Countermeasure; EH-1X Helicopter, Electronic Countermeasure and Intercept.

CHANGE

NO. 6

Headquarters
Department of the Army
Washington, D.C.,
29 January 1990

**UH-1H/V AND EH-1H/X AIRCRAFT
PREVENTATIVE MAINTENANCE
DAILY INSPECTION CHECKLIST**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TM 55-1520-210-PMD, 11 January 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by miniature pointing hands.

Remove Pages

3 and 4

17 and 18

21 and 22

23 through 26

Insert Pages

3 and 4

17 and 18

21 and 22

25 blank/26

2. Retain this sheet in front of manual for reference purposes.

TM 55-1520-210-PMD
C6

By Order of the Secretary of the Army:

CARL E. VUONO
General, United States Army
Chief of Staff

OFFICIAL:

WILLIAM J. MEEHAN II
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION: To be distributed in accordance with DA Form 12-31, PM requirements for UH-1H/UH-1V Helicopter, Utility; EH-1H Helicopter, Electronic Countermeasure; EH-1X Helicopter, Electronic Countermeasure and Intercept.

CHANGE

NO. 5

Headquarters
Department of the Army
Washington, D.C.,
16 October 1989

**UH-1H/V AND EH-1H/X AIRCRAFT
PREVENTATIVE MAINTENANCE
DAILY INSPECTION CHECKLIST**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TM 55-1520-210-PMD, 11 January 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by miniature pointing hands.

Remove Pages

17 and 18

21 and 22

27/28

Insert Pages

17 and 18

27/28

2. Retain this sheet in front of manual for reference purposes.

TM 55-1520-210-PMD
C5

By Order of the Secretary of the Army:

CARL E. VUONO
General, United States Army
Chief of Staff

OFFICIAL:

WILLIAM J. MEEHAN II
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION: To be distributed in accordance with DA Form 12-31, PM requirements for UH-1H/UH-1V Helicopter, Utility; EH-1H Helicopter, Electronic Countermeasure; EH-1X Helicopter, Electronic Countermeasure and Intercept.

CHANGE

NO. 4

Headquarters
Department of the Army
Washington, D.C.,
17 August 1988

**UH-1H/V AND EH-1H/X AIRCRAFT
PREVENTATIVE MAINTENANCE
DAILY INSPECTION CHECKLIST**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TM 55-1520-210-PMD, 11 January 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by miniature pointing hands.

Remove Pages

13 and 14

17 and 18

Insert Pages

13 and 14

17 and 18

2. Retain this sheet in front of manual for reference purposes.

TM 55-1520-210-PMD
C4

By Order of the Secretary of the Army:

CARL E. VUONO
General, United States Army
Chief of Staff

OFFICIAL:

R. L. DILWORTH
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31, PM requirements for UH-1H/UH-1V Helicopter, Utility; EH-1H Helicopter, Electronic Countermeasure; EH-1X Helicopter, Electronic Countermeasure and Intercept.

CHANGE

NO. 3

Headquarters
Department of the Army
Washington, D.C.,
3 June 1988

**UH-1H/V AND EH-1H/X AIRCRAFT
PREVENTATIVE MAINTENANCE
DAILY INSPECTION CHECKLIST**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TM 55-1520-210-PMD, 11 January 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by miniature pointing hands.

Remove Pages

9 and 10

15 and 16

19 and 20

Insert Pages

9 and 10

15 and 16

19 and 20

2. Retain this sheet in front of manual for reference purposes.

TM 55-1520-210-PMD
C3

By Order of the Secretary of the Army:

CARL E. VUONO
General, United States Army
Chief of Staff

OFFICIAL:

R. L. DILWORTH
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31, PM Requirements for UH-1D/H/V/EH-1H aircraft.

CHANGE

NO. 2

Headquarters
Department of the Army
Washington, D.C.,
25 September 1986

**UH-1H/V AND EH-1H/X AIRCRAFT
PREVENTATIVE MAINTENANCE
DAILY INSPECTION CHECKLIST**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TM 55-1520-210-PMD, 11 January 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by miniature pointing hands.

Remove Pages
15 through 18

Insert Pages
15 through 18

2. Retain this sheet in front of manual for reference purposes.

**TM 55-1520-210-PMD
C2**

By Order of the Secretary of the Army:

JOHN A. WICKHAM, JR.
General, United States Army
Chief of Staff

OFFICIAL:

R. L. DILWORTH
Major General, United States Army
The Adjutant General

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31, PM requirements for UH-1H/UH-1V Helicopter, Utility; EH-1H Helicopter, Electronic Countermeasure; EH-1X Helicopter, Electronic Countermeasure and Intercept.

CHANGE

NO. 1

Headquarters
Department of the Army
Washington, D.C.,
19 March 1985

**UH-1H/V AND EH-1H/X AIRCRAFT
PREVENTATIVE MAINTENANCE
DAILY INSPECTION CHECKLIST**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TM 55-1520-210-PMD, 11 January 1983, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by miniature pointing hands.

Remove Pages

7 through 10

15 through 22

Insert Pages

7 through 10

15 through 22

2. Retain this sheet in front of manual for reference purposes.

**TM 55-1520-210-PMD
C1**

By Order of the Secretary of the Army:

JOHN A. WICKHAM, JR.
General, United States Army
Chief of Staff

OFFICIAL:

DONALD J. DELANDRO
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION: To be distributed in accordance with DA Form 12-31, PM Maintenance Requirements for UH-1D/H/V/EH aircraft.

LIST OF EFFECTIVE PAGES

Insert the latest changed pages in accordance with the instructions on the transmittal sheet.

NOTE: On a changed page, the portion of the text affected by the latest change is indicated by a vertical line in the outer margin of the page. Changes to illustrations are indicated by a letter suffix adjacent to the identification number. Added or completely revised chapters, sections, paragraphs, tables, etc., are indicated by a vertical line by the title.

Dates of issue for original and change pages are:

Original	11 January 1983	Change 8	11 September 1992
Change 1	19 March 1985	Change 9	23 February 1996
Change 2	25 September 1986	Change 10	27 April 2001
Change 3	3 June 1988	Change 11	11 April 2003
Change 4	17 August 1988	Change 12	24 May 2004
Change 5	16 October 1989	Change 13	1 August 2005
Change 6	29 January 1990	Change 14	30 April 2009
Change 7	14 August 1990		

TOTAL NUMBER OF PAGES IN THIS PUBLICATION IS 30, CONSISTING OF THE FOLLOWING:

Page No.	*Change No.	Page No.	*Change No.
Cover	14	6	0
A	14	7	8
B	14	8	1
1	14	9	10
2	9	10	1
3	14	11	13
4	0	12	9
5	0	13	4

*Zero in this column indicates an original page.

LIST OF EFFECTIVE PAGES (Cont)

Page No.	*Change No.	Page No.	*Change No.
14	10	19	12
15	1	20	10
16	3	21	6
17	6	22	10
18	14	23	14
18.1	7	24 Blank	14
18.2 Blank	7		

*Zero in this column indicates an original page.
B Change 14

***TM 55-1520-210-PMD**

**HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, D.C., 11 January 1983**

**UH-1H/V HELICOPTER
PREVENTIVE MAINTENANCE
DAILY INSPECTION CHECKLIST**

GENERAL INFORMATION AND SCOPE

WARNING: CERTAIN INSPECTIONS ARE MANDATORY SAFETY-OF-FLIGHT REQUIREMENTS, AND THE INSPECTION INTERVALS CANNOT BE EXCEEDED. IN THE EVENT THESE INSPECTIONS CANNOT BE ACCOMPLISHED AT SPECIFIED INTERVAL, THE AIRCRAFT CONDITION STATUS SYMBOL WILL BE IMMEDIATELY CHANGED TO A RED X. THESE TYPE INSPECTION ITEMS ARE PRECEDED BY "MANDATORY SAFETY-OF-FLIGHT INSPECTION ITEM."

NOTE: INDIVIDUAL INSPECTION ITEMS CONTAINED IN THIS MANUAL ARE CONSIDERED THE MINIMUM REQUIREMENTS FOR PERFORMING A DAILY INSPECTION AND MUST BE PERFORMED. THE CUMULATIVE EFFECTS OF INSPECTION DEFERRALS ARE UNKNOWN AND COULD RESULT IN CATASTROPHIC FAILURE OR INCREASED MAINTENANCE AT A LATER DATE. THEREFORE, THE USE OF SPECIAL LETTERING TO EMPHASIZE MANDATORY SAFETY-OF-FLIGHT INSPECTION ITEMS IS NOT TO BE CONSTRUED AS AUTHORITY FOR DEFERRAL OF OTHER INSPECTIONS.

*This manual supersedes TM 55-1520-210-PMD, 26 July 1979, including all changes.

1. INSPECTION REQUIREMENTS. This manual contains complete requirements for daily inspection for UH—1H/V aircraft. It does not contain instructions for repair, adjustment, or other means of rectifying conditions, nor does it contain instructions for troubleshooting to find causes for malfunctioning. Specific tolerances, limits, etc., can be found in the applicable maintenance manuals. Use of the alphabetical index in the applicable manual will facilitate locating the required information.

2. MAINTENANCE ACTIVITIES. The inspections prescribed by this manual will be performed at specified periods by Aviation Unit Maintenance (AVUM) activities with assistance of Aviation Intermediate Maintenance (AVIM) and Depot Maintenance activities when required.

3. GENERAL INFORMATION.

a. The inspection requirements contained herein are stated in such a manner as to establish what conditions are desired/undesired. Compliance with the provisions outlined herein is required in order to assure that proper servicing has been accomplished and latent defects are discovered and corrected before malfunctioning or serious trouble results. Inspection requirements are arranged, as nearly as possible, according to the manner in which they will be performed. The requirements are divided into groups under area headings.

b. The inspection intervals designated herein will not be exceeded except in actual operational emergencies as explained herein. It is the commander's responsibility to determine (on

an individual aircraft basis) when inspection intervals may be exceeded. For this purpose, operational emergencies are conditions of combat, or conditions of disaster which necessitate flight to evacuate aircraft or personnel. When aircraft are operated beyond the normal inspection due-time because of such emergency situations, a Circled Red "X" status symbol, system, date and fault/remarks must be entered in Part I-Fault Information of DA Form 2408-13-1/2408-13-1-E (Aircraft Inspection and Maintenance Record) until such time as the inspection is complete. Since safety may be jeopardized when inspections are delayed to meet emergency requirements, commander will assure that the aircraft status symbol reverts to a Red "X" and that delayed inspections are accomplished immediately upon termination of the actual emergency. When unusual local conditions of environment, utilization, mission, experience of flight crew and maintenance personnel, periods of inactivity, etc., are encountered, the maintenance officer will, at his discretion, increase the scope and/or frequency of maintenance or inspections as necessary to ensure safe flight.

c. This manual may contain inspection requirements applicable to specific equipment not installed on your aircraft. Those requirements should be disregarded.

d. DA Form 2408-13-1/2408-13-1-E will be used to record all deficiencies or shortcomings discovered during the inspection.

e. A 1-½ inch space between each area of inspection is being provided to allow insertion of additional inspection items as required by local command inspection procedures.

4. SPECIAL INSTRUCTIONS. A Preventative Maintenance Daily inspection is accomplished after the last flight of the mission day, or prior to the first flight on the next mission day on which the aircraft is flown. The inspection consists of visual examination and operational checks to determine that the aircraft can safely and efficiently perform the assigned mission.

5. REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS. You can help improve this manual. If you find any mistakes, or if you know a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms) located in the back of the applicable aircraft maintenance manual, (when using the 2028 from the maintenance manual, insure that the publication

number and title refer to this PMD) directly to: Commander, US Army Aviation and Missile Command, ATTN: AMSAM-MMC-MA-NP, Redstone Arsenal, AL 35898-5000. A reply will be furnished to you. You may also provide DA Form 2028 information to AMCOM via e-mail, fax, or the World wide Web. Our fax number is : DSN 788-6546 or Commercial 256-842-6546. Our e-mail address is: 2028@redstone.army.mil. Instructions for sending an electronic 2028 may be found at the back of the aircraft maintenance manual immediately preceding the hard copy 2028. For the World Wide Web use: <https://amcom2028.redstone.army.mil>

6. INSPECTION AREAS. Inspection areas are shown in Figure 1.

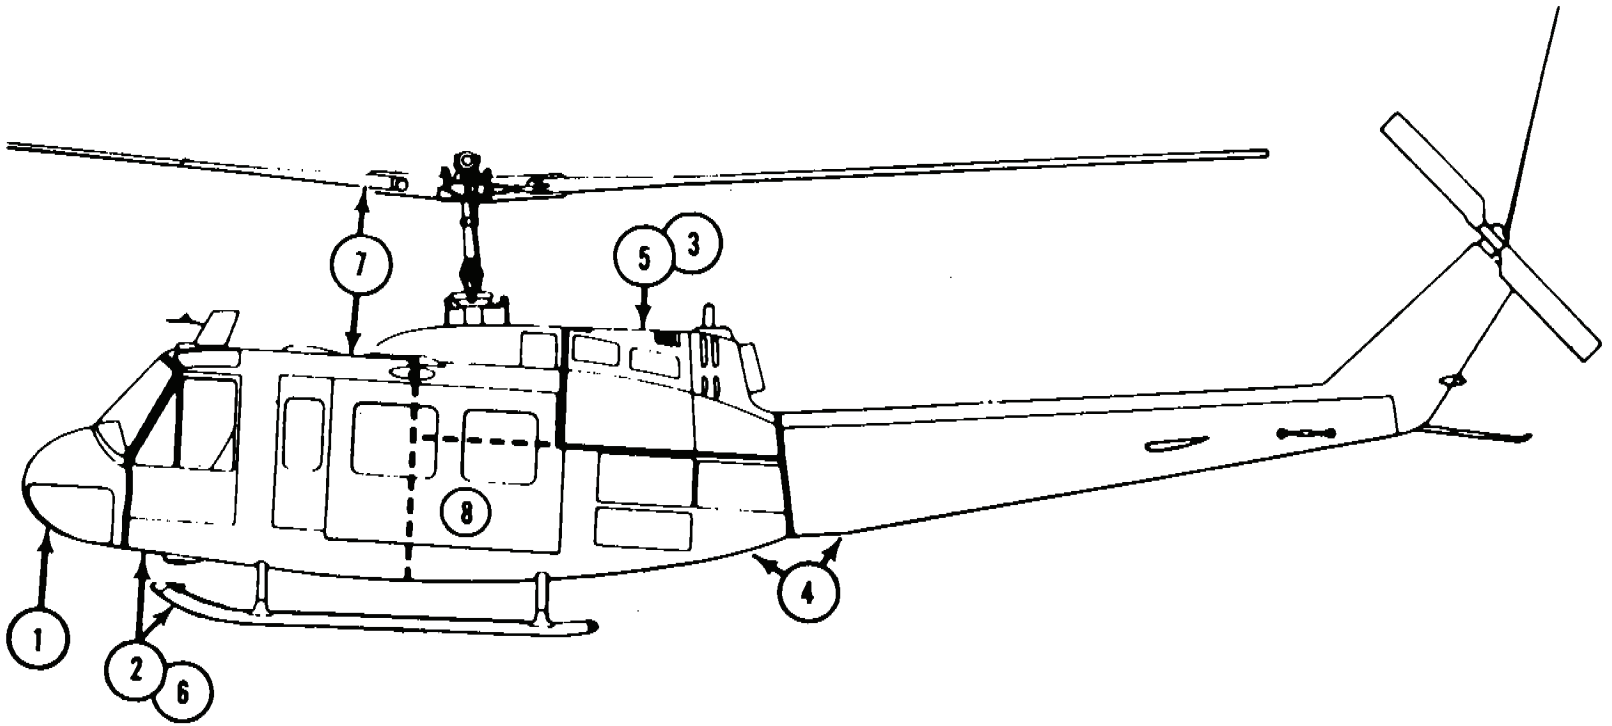


Figure 1. Inspection areas

Area No. 1	Nose Area	All surfaces, components and equipment in nose compartment and on exterior ahead of crew doors.
Area No. 2	Cabin Exterior and Landing Gear Left Side	All surfaces, components, and equipment on cabin exterior and underside between forward sides of crew doors and aft cabin walls. Includes landing gear, and forward fuel cell sump on cabin under side. Includes compartment in pylon island below main transmission.
Area No. 3	Engine Area Left Side	All surfaces, components, and equipment associated with engine installation, located above engine work deck and within engine cowling, tailpipe fairing and intake fairing.
Area No. 4	Tailboom Area	All surfaces, components and equipment located in or on the tailboom and vertical fin. Including access compartments below engine work deck and aft of cabin walls.
Area No. 5	Engine Area Right Side	All surfaces, components, and equipment associated with engine installation, located above engine work deck and within engine cowling, tailpipe fairing and intake fairing.
Area No. 6	Cabin Exterior and Landing Gear Right Side	All surfaces, components, and equipment on cabin exterior and underside between forward sides of crew doors and aft cabin walls. Includes landing gear, and forward fuel cell sumps on cabin underside. Includes compartment in pylon island below main transmission.

Area No. 7

Upper Pylon Area

All surfaces, components, and equipment of the main rotor pylon group, from top of mast to the bottom of the transmission mounts. Includes main rotor, mast and rotating controls, transmission with accessories and mounts, and main (input) drive shaft. Includes top of cabin surface and components.

Area No. 8

Lower Pylon Area
(via Cabin Interior)
and Interior Area

All surfaces, components, and equipment inside of cabin area, between forward sides of crew doors and aft cabin walls and pylon island structure. Including all instruments, equipment, seats, and accessories. Lower pylon area including bottom of transmission, electrical and hydraulic components.

PREVENTATIVE MAINTENANCE DAILY CHECKLIST

The Preventive Maintenance Daily Checklist will be accomplished following the last flight of the day or prior to the first flight on the next day on which the aircraft is flown. The inspection consists of visual examination and operational checks to determine that the aircraft can safely and efficiently perform its assigned mission.

DAILY INSPECTION TOTAL WORK TIME:

Seq. No.	Item and Procedure	Seq. No.	Item and Procedure
	NOSE AREA		
1.1	Inspect aircraft forms and records for recorded discrepancies (DA PAM 738-751).	1.6	Pilot's and copilot's tail rotor controls for visible damage and security.
1.2	Nose section exterior for visible damage.	1.7	Pilot's and copilot's windshields for condition and cleanliness.
1.3	Nose compartment interior for cleanliness, equipment for visible damage and loose connections.	1.8	Pilots and copilot's windshield wiper blades for deterioration and serviceability.
1.4	Battery and connections for security, leakage and cleanliness. Vent lines for obstructions, kinking and security. Nose compartment door for secure latching.	1.9	Pitot tube for obstructions, cleanliness (Nose mount).
1.5	Pilot's and copilot's chin bubbles for condition and cleanliness.	1.10	Static ports for obstructions, cleanliness (Nose mount).

“FOD REMINDER”

Check work area for tools and parts after completion of maintenance and inspection.

Seq. No.	Item and Procedure
CABIN EXTERIOR AND LANDING GEAR (LEFT SIDE)	
2.1	Cabin exterior for obvious damage. Stencils and decals for legibility
2.2	Crew door for positive latching, seals for deterioration, windows for cleanliness and condition, security of hinges and proper operation. Check emergency jettison handles for condition. Copper safety wire for condition and security.
2.3	Hinged cabin door for damage and positive latching. Windows for cracks, crazing and cleanliness.
2.4	Deleted.
2.5	Cargo doors for positive latching. Windows for cleanliness. Door retainers, rollers and

Seq. No.	Item and Procedure
	sliders for damage, security, and proper operation. Check window emergency jettison handles for condition. Copper wire for condition and security.
2.6	Landing gear for damage and security, cross tube bolts missing, broken, ground handling eyebolt loose. Cross tubes for visual indications of excess spread.
2.7	Inspect bottom of cabin for cracks, buckles, wrinkles, and loose or missing rivets, particularly in cross tube attaching areas.
2.8	Landing and search lights for security and condition.
2.9	Cargo suspension assembly for security, cleanliness and freedom of operation of safety latch. Check manual release and inspect cable for wear. On nonswiveling type, manually test hook for rotational play indicating broken shear pin.

"FOD REMINDER"

CHECK WORK AREA FOR TOOLS AND PARTS AFTER COMPLETION OF MAINTENANCE AND INSPECTION.

Seq. No.	Item and Procedure
	MANDATORY SAFETY OF FLIGHT INSPECTION ITEM
2.10	Control linkage, irreversible valves and hydraulic cylinders in fuselage below pylon for evidence of leaks from cylinders and connecting lines, damage and security. Cyclic and collective cylinder caps (P/N 100621 or P/N 100621-1) for security by a feel test. Tab washer tangs must be bent and in contact with flats on the retainers.
	MANDATORY SAFETY OF FLIGHT INSPECTION ITEM
2.11	Check that all four bolts/screws through the servo lever assembly have a self-locking castellated nut safetied with cotter pin. Check that nuts and bolts/screws as an assembly can be turned by hand.
2.11.1	For servos P/N 205-076-056 check that control tube servo bolt can be turned by hand
2.12	External stores installation for condition and security.
2.13	M130 chaff bracket for damage and security.

Seq. No.	Item and Procedure
2.14	Position lights for condition, security and cracked lens. Night Fix - Phase I (NVG) position light covers for condition
	ENGINE AREA (LEFT SIDE)
3.1	Engine cowling and fairing for security and damage, and loose or missing fasteners.
3.2	Engine air inlet, engine accessories and connections for damage and security. Check for fuel and oil leaks.
3.3	Electrical cables, ignition coil and lead; Fire Detector Assembly for chafing, cracks and security. Check exciter box for condition and security.
3.3.1	(Aircraft equipped with ODDS) check engine external oil filter bypass buttons for extended indication.
3.3.2	Chip Detectors for physical security and damage (i.e., broken wires)

"FOD REMINDER"

CHECK WORK AREA FOR TOOLS AND PARTS AFTER COMPLETION OF MAINTENANCE AND INSPECTION.

Seq. No.	Item and Procedure
3.4	Main and starting fuel manifolds for leaks and security
3.5	Flow divider assembly inspect for leaks, damage and security
3.6	Engine compressor housing visually for cracks, scratches, corrosion and security
3.7	Fuel control power lever for freedom of movement through full range to each stop
3.8	Engine mounts visually for cracks, damage and security.
3.9	Engine combustion chamber housing, exhaust diffuser, support cone, fireshield, firewall gaskets and seals, and tailpipe for cracks, dents, and burned or buckled areas.
3.10	Bleed air tubing for chafing and security
3.11	Second stage turbine blades; inspect through tailpipe and through exhaust diffuser for cracks, burns, dents or missing blades.
3.12	Anti-collision light for condition, security, and cracked lens

Seq. No.	Item and Procedure
3.13	M52 smoke generator nozzle for condition and security. Oil lines for condition, security and leakage.
TAILBOOM AREA (LEFT SIDE)	
4.1	Electrical compartments access doors for condition and security. Electrical equipment for condition and security. Loose or missing rivets (interior). NOTE: Nothing is to be stored in either of these three electrical compartments.
4.2	AC power receptacle, access door and caution light switch for security and condition
4.3	DC power receptacle, access door and caution light switch for security and condition.

"FOD REMINDER"

CHECK WORK AREA FOR TOOLS AND PARTS AFTER COMPLETION OF MAINTENANCE AND INSPECTION.

Seq. No.	Item and Procedure
4.4	Check oil cooler vanes for obstructions, security, and damage. Oil cooler shield assembly for security, cracks, loose or missing rivets and corrosion.
4.5	Check hanger assembly, driveshaft clamps, tail pipe drain line, heat shield and electrical wiring for condition and security.
MANDATORY SAFETY OF FLIGHT INSPECTION ITEM	
4.6	Tail rotor driveshaft installation for damage, foreign materials and security of hangers, coupling clamps and covers. Inspect all tail rotor driveshaft couplings for grease leakage. Bearing for indication of overheating
4.7	Tail rotor driveshafts for corrosion, visible damage and missing weights
4.8	Inspect tailboom, synchronized elevator and vertical fin exterior skin for evidence of damage, cracks, loose or missing rivets, and corrosion.
4.9	Check for radial play condition and security of synchronized elevator

Seq. No.	Item and Procedure
MANDATORY SAFETY OF FLIGHT INSPECTION ITEM	
4.10	Remove the intermediate 42 degree gearbox cover to inspect left hand vertical spar cap. Inspect vertical fin spar and vertical fin driveshaft cover attachment channel for cracks. Cleanliness of chain, and condition of aft cables and grommets. Inspect chain/sprocket access cover attachment rivets for looseness and condition. Inspect for loose or missing rivets attaching the 90 degree gearbox attachment fitting.
MANDATORY SAFETY OF FLIGHT INSPECTION ITEM	
4.11	Tail Rotor (90 degree) gearbox for security, oil level and leaks. Tail rotor control installation for condition and security.
4.11.1	Chip detectors for physical security and damage (i.e. broken wires).
MANDATORY SAFETY OF FLIGHT INSPECTION ITEM	
4.12	Tail rotor hub, tail rotor retention nut split cones and blade assembly for security and visible damage.

"FOD REMINDER"

CHECK WORK AREA FOR TOOLS AND PARTS AFTER COMPLETION OF MAINTENANCE AND INSPECTION.

Seq. No.	Item and Procedure
4.13	<p style="text-align: center;">MANDATORY SAFETY OF FLIGHT INSPECTION ITEM</p> <p>Visually inspect tail rotor crosshead to slider retaining bolts and nuts for security.</p>
4.14	<p style="text-align: center;">MANDATORY SAFETY OF FLIGHT INSPECTION ITEM</p> <p>Visually inspect pitch change link attachment bolts and nuts for security.</p>
4.15	<p style="text-align: center;">MANDATORY SAFETY OF FLIGHT INSPECTION ITEM</p> <p>Using a clean soft cloth, wipe blade surface. Visually inspect for cracks, skin separation and other damage, with special attention to the area on both sides of blade between the blade doublers and four (4) to six (6) inches (10 to 15 cm) outboard of the doublers. Internal rattling sound heard when hub and blade assembly is rotated is caused by internal debris and is not cause for rejection.</p>
4.16	Check tail skid for condition and security.

Seq. No.	Item and Procedure
4.17	Tailboom vent for condition and security.
4.18	Check position light for condition, security, and cracked lens.
	<p>TAILBOOM AREA (RIGHT SIDE)</p> <p>MANDATORY SAFETY OF FLIGHT INSPECTION ITEM</p>
4.19	Intermediate (42 degree) gearbox for security, oil level, and leaks.
4.19.1	Chip detectors for physical security and damage (i.e. broken wires).
4.20	Inspect tailboom, synchronized elevator and vertical fin exterior skin for evidence of damage, cracks, loose or missing rivets, and corrosion.

"FOD REMINDER"

CHECK WORK AREA FOR TOOLS AND PARTS AFTER COMPLETION OF MAINTENANCE AND INSPECTION.

Seq. No.	Item and Procedure
4.21	Check for radial play, condition and security of synchronized elevator.
4.22	Oil cooling compartment door for security and condition. NOTE: Nothing is to be stored in this compartment.
4.23	Battery and connections, for cleanliness and security. Vent lines for obstructions, kinking and security. Battery shelf for security of attaching points and supporting structure for damage and cracks.
4.24	Check tail rotor control servo for leakage, condition and security. Hydraulic piston wiped clean.
MANDATORY SAFETY OF FLIGHT INSPECTION ITEM	
4.25	Oil cooler turbine blower fan blades for free movement. Screen for obstruction, security and condition. Supporting structure and bleed air line visually for condition and security. Connecting link (rigid structural tube), for installation.

Seq. No.	Item and Procedure
MANDATORY SAFETY OF FLIGHT INSPECTION ITEM	
4.26	Tailboom attach bolts visually for security and slippage marks. Fittings for cracks. Inspect longerons up to 12 inches from the fittings for cracks.
MANDATORY SAFETY OF FLIGHT INSPECTION ITEM	
4.27	Tail rotor control quadrant for proper installation and condition of cables.
4.28	Heater mixing valve and air duct for condition and security.
4.29	Check muff heater system and hoses for condition and security.
4.30	Heater compartment doors for condition and security. Heater compartment for condition. NOTE: Nothing is to be stored in this compartment.
4.31	Visually inspect fuel level. Check fuel cap and closed circuit refueling hardware for condition, operation and security.

"FOD REMINDER"

CHECK WORK AREA FOR TOOLS AND PARTS AFTER COMPLETION OF MAINTENANCE AND INSPECTION.

Seq. No.	Item and Procedure
	ENGINE AREA (RIGHT SIDE)
5.1	Engine cowling and fairing for security, damage and loose or missing fasteners.
5.1.1	Main and Start fuel manifolds for leaks and security.
5.2	Engine inlet housing, accessories and connections for damage and security. Check for fuel and oil leaks.
5.3	Starter-generator intake and outlet ducts for deterioration and security.
5.4	Engine compressor housing visually for cracks, scratches, corrosion and security.
5.5	Engine combustion chamber housing, exhaust diffuser, support cone, fireshield, firewall gaskets and seals, and tailpipe for cracks, dents, and burned or buckled areas.
5.5.1	<p style="text-align: center;">NOTE</p> <p style="text-align: center;">Aircraft with Infrared Heat Suppressor (IRS) only</p> Check "V" clamp (clamp) that attaches the Forward Duct Assembly (Bellmouth Assembly) to the Insulated Exhaust Duct Assembly for visible damage and security.
5.6	Engine mounts visually for cracks, damage and security.

Seq. No.	Item and Procedure
	MANDATORY SAFETY OF FLIGHT INSPECTION ITEM
5.7	Engine oil tank for security and oil level, lines for leaks or damage. Sight gages for damaged or stained glasses.
5.8	Exhaust thermocouple assembly for chafing, cracks and security.
5.9	Electrical cable assembly, ignition coil lead and fire detector assembly for chafing, cracks, and security.
	CABIN EXTERIOR AND LANDING GEAR (RIGHT SIDE)
6.1	Cabin exterior for obvious damage. Stencils and decals for legibility.

"FOD REMINDER"

CHECK WORK AREA FOR TOOLS AND PARTS AFTER COMPLETION OF MAINTENANCE AND INSPECTION.

Seq. No.	Item and Procedure
6.2	Crew door for positive latching, seals for deterioration, windows for cleanliness and condition, security of hinges and proper operation. Check emergency jettison handles for condition. Copper safety wire for condition and security.
6.3	Hinged cabin door for damage and positive latching, Windows for cracks, crazing and cleanliness.
6.4	Handholds and steps for cracks, corrosion and loose hardware. Step hinges for proper operation and security.
6.5	Cargo door for positive latching. Windows for cleanliness. Door retainers, rollers and sliders for damage, security and proper operation. Check window emergency jettison handles for condition. Copper wire for condition and security.
6.6	Landing gear for damage and security, cross tube bolts missing, broken ground handling eyebolt loose. Cross tubes for visual indications of excess spread.

Seq. No.	Item and Procedure
6.7	Inspect bottom of cabin for cracks, buckles, wrinkles, and loose or missing rivets, particularly in cross tubes areas.
6.8	External stores installation for condition and security.
6.9	M130 chaff/flare bracket for damage and security.
6.10	Check position lights for condition, security and cracked lens. Night Fix — Phase I (NVG) position light covers for condition.
UPPER PYLON AREA AND CABIN TOP	
7.1	Pitot tube and static ports for obstruction and cleanliness (Roof Mount).

"FOD REMINDER"

CHECK WORK AREA FOR TOOLS AND PARTS AFTER COMPLETION OF MAINTENANCE AND INSPECTION.

Seq. No.	Item and Procedure
7.2	Cabin roof windows for cracks, crazing and cleanliness.
7.3	Cabin roof for damage, skin cracks, tear, and loose or missing rivets. Skin for buckled areas. Paint for chipped or peeling condition.
7.4	Transmission cowling for damage and security. EH-1H/X Inspect alternator wires for chaffing.
7.5	Alternator air intake for damage and security.
7.6	Hydraulic reservoir for fluid level.
	MANDATORY SAFETY OF FLIGHT INSPECTION ITEM
7.7	Main (input) drive shaft couplings for evidence of grease leakage, clamps for security.
7.8	Deleted
7.8.1	Inspect all lines, fittings and accessories on top half of transmission for security, condition and leaks.

Seq. No.	Item and Procedure
	MANDATORY SAFETY OF FLIGHT INSPECTION ITEM
7.9	Exterior of FOD screen for foreign material (grass or vegetation).
	MANDATORY SAFETY OF FLIGHT INSPECTION ITEM
7.10	Non self-purging separator; intake screen and filter for damage, obstructions and loose or missing fasteners. Check gaps between screen sections, not to exceed screen mesh width. Remove airframe (OD) screen, clean sand and dust separator; foam and metal filters, inspect for damage.

"FOD REMINDER"

CHECK WORK AREA FOR TOOLS AND PARTS AFTER COMPLETION OF MAINTENANCE AND INSPECTION.

Seq. No.	Item and Procedure
7.11	<p style="text-align: center;">MANDATORY SAFETY OF FLIGHT INSPECTION ITEM</p> <p>Self-purging separator: intake screen for damage, obstructions and loose or missing fasteners. Check flex hose for wear, discharge tube connections for security, and airframe (FOD) screen for damage. If damaged, remove airframe (FOD) screen and top half of airframe screen and the upper air filter assembly. INSPECT ENGINE INLET FOR FOD. Remove accumulated residue from the overboard discharge tube assembly.</p> <p style="text-align: center;">MANDATORY SAFETY OF FLIGHT INSPECTION ITEM</p>
7.11.1	<p>Improved Particle Separator: Check missing, damaged, or obstructed vortex tubes, loose or missing fasteners, and evidence of parts entering the engine inlet. If external inspection indicates parts may have entered engine inlet, remove Separator and INSPECT ENGINE INLET FOR FOD. Remove any impacted sand or dirt from exterior of Separator and Separator air outlets.</p>

Seq. No.	Item and Procedure
7.12	<p style="text-align: center;">MANDATORY SAFETY OF FLIGHT INSPECTION ITEM</p> <p>Sealant between rigid connecting link and clevis rod end. If adhesive bond is broken, remove tube assembly, inspect for corrosion and thread damage.</p> <p style="text-align: center;">MANDATORY SAFETY OF FLIGHT INSPECTION ITEM</p>
7.13	<p>Collective levers for cracks, corrosion, security and visible damage. Bearings and bushings for excessive play.</p> <p style="text-align: center;">MANDATORY SAFETY OF FLIGHT INSPECTION ITEM</p>
7.14	<p style="text-align: center;">MANDATORY SAFETY OF FLIGHT INSPECTION ITEM</p> <p>Swashplate, scissors and sleeve, drive links and connecting linkage and rod and bearings for corrosion, security and visible damage. Visually inspect control lugs (3 each) on swashplate inner rings for cracks. Inspect trunnion bearings for radial and axial play and visually inspect trunnion bearing ball for cracks.</p>

"FOD REMINDER"

CHECK WORK AREA FOR TOOLS AND PARTS AFTER COMPLETION OF MAINTENANCE AND INSPECTION.

Seq. No.	Item and Procedure
MANDATORY SAFETY OF FLIGHT INSPECTION ITEM	
7.15	Mast and boots for visible damage, corrosion and security. Visually inspect main rotor mast between hub spring support and mast plate assembly on the yoke for surface damage. Tilt main rotor blades for maximum visibility.
7.15.1	Hub spring assembly, for security, condition, deformation and cracks in rubber bumper.
7.16	Stabilizer dampers for full fluid level, leakage and security of attachment.
MANDATORY SAFETY OF FLIGHT INSPECTION ITEM	
7.17	Stabilizer bar assembly for visible damage, corrosion and security. all pivot bolts and nuts and mounting bolts visually for cracks and security.

Seq. No.	Item and Procedure
7.18	Stabilizer bar connecting linkage for visible damage, security of attachment and corrosion. Pitch links and rod end bearings for play and security.
7.19	Main rotor pillow block and grip reservoirs for oil level, leakage and security; hub assembly, blade grips, pitch horns and drag braces for visible damage and security.
NOTE	
Direct particular attention to the Blade Grips in the area Drag Brace attachment lugs for cracks.	
MANDATORY SAFETY OF FLIGHT INSPECTION ITEM	
7.20	Gain access to blades. Wipe blades upper and lower surfaces with a clean soft cloth and inspect both surfaces and blade tip for damage, cracks and visible indications of voids and bond separation. Inspect for nicks and dents in trailing edge and scarf joints for erosion and corrosion.
7.20.1	Visually inspect composite main rotor blade for damage and security.

"FOD REMINDER"

CHECK WORK AREA FOR TOOLS AND PARTS AFTER COMPLETION OF MAINTENANCE AND INSPECTION.

Seq. No.	Item and Procedure
7.21	Cabin roof vents for obstructions and condition.
7.22	Check position lights for condition, security and cracked lens

Seq. No.	Item and Procedure

"FOD REMINDER"

CHECK WORK AREA FOR TOOLS AND PARTS AFTER COMPLETION OF MAINTENANCE AND INSPECTION.

Seq. No.	Item and Procedure
8.1	<p style="text-align: center;">LOWER PYLON AREA (VIA CABIN INTERIOR) AND INTERIOR AREA</p> <p style="text-align: center;">MANDATORY SAFETY OF FLIGHT INSPECTION ITEM</p> <p>Transmission for security, corrosion, damage, chafing oil lines and oil leaks. Check sump for water contamination and for oil level. External oil filter for by-pass indication. Sight gages for damage and staining. Lift link and both attaching clevis lugs on transmission for wear, cracks and proper installation of hardware. Aircraft equipped with ODDS, check physical security of debris monitor electrical connector and condition of wires.</p> <p style="text-align: center;">MANDATORY SAFETY OF FLIGHT INSPECTION ITEM</p>
8.2	Transmission oil line quick disconnects for excessive play IAW TM 55-1520-210-23
8.3	Inspect for condition and security of transmission friction dampers, #1 tail rotor driveshaft and all fuel and oil lines for damage, and chaffing. Inspect for structural damage, loose and missing rivets and cracks around the resilient mounts.
8.4	Hydraulic servo cylinder mount nuts (4 each cylinder), check slippage marks.

Seq. No.	Item and Procedure
8.5	Tachometer generator for damage and security.
8.6	Hydraulic system components and lines for security, damage and evidence of leaks. Wipe clean all exposed hydraulic pistons. Hydraulic filter for appearance of red indicator button.
	<p style="text-align: center;">NOTE</p> <p style="text-align: center;"><i>If red indicator button on hydraulic module pops before 450 hours is reached, replace filter. If temperature is below 20°F (-6.7°C), allow fluid to warm up and reset button. If button pops again, replace filter.</i></p>
8.7	Output drive shaft coupling for grease leakage and security.
8.8	Cabin interior clean and clear of loose objects or tools.
8.9	First aid kits for designated location, presence of inspection data tag, broken or missing seal and security.
8.10	Troop seats, seat belts and mission equipment security installed or stowed.

"FOD REMINDER"

CHECK WORK AREA FOR TOOLS AND PARTS AFTER COMPLETION OF MAINTENANCE AND INSPECTION.

Seq. No.	Item and Procedure
8.11	Sound absorbing blankets securely installed with all bulkhead tiedown fittings, straps and rings outside of blankets.
8.12	Cargo tiedowns for corrosion and security.
8.13	Reinforced mounting plates (Avionics) for damage and security.
8.14	M52 smoke generator oil tank, oil pump and lines for visible damage and security.
8.15	Crew member/mission operator seats for damage, security, and positive movement and locking in all positions. Safety belts and shoulder harness for damage, corrosion, cuts, fraying and security. Inertia reels for damage, security, and positive locking and unlocking. Check quick emergency release handles for security and conditions. Copper safety wire for condition and security.
8.16	Crew member/mission operator seat cushions and back cover for general condition, cuts, tears, burns, stains, fading, broken stitches and sagging.
8.17	Fire extinguishers for proper location and seal intact. Presence of inspection data tag (DD Form 1574)

Seq. No.	Item and Procedure
8.18	Fire extinguishers and brackets for damage and security of installation.
8.19	Rifle rack bracket for damage and security.
8.20	All instruments for cleanliness, visible damage and proper range markings.
8.21	On Night Fix — Phase 1 (NVG) modified aircraft: Check lighting for corrosion and cracked or crazed lenses. Glareshield extension for security.
8.22	Compass Correction card for availability and legibility.
8.23	Pedals checked.
8.24	Windshield wiper motor cover guards for cracks and damage
8.25	Check circuit breakers and switches set as required.

"FOD REMINDER"

CHECK WORK AREA FOR TOOLS AND PARTS AFTER COMPLETION OF MAINTENANCE AND INSPECTION.

Seq. No.	Item and Procedure
8.26	Deleted
ALL AREAS	<p style="text-align: center;">MANDATORY SAFETY OF FLIGHT INSPECTION ITEM</p> <p style="text-align: center;">LUBRICATION</p> <p>Lubricate in accordance with lubrication chart contained in Chapter 1, of TM 55-1520-210-23, applicable to the daily requirements.</p>

Seq. No.	Item and Procedure
	POWER ON
1.11	Battery on, check for 24 volts.
1.12	Pitot heater for operation (Nose Mount)
2.15	Exterior lights (navigation, anticollision, landing, and search lights) for proper operation.
2.16	Cargo hook electrical release for operation.
2.17	Windshield wiper motor pilot/co-pilot for operation.
3.14	Fuel tank sump drains for water or other contamination. (Use sample jar.) (Fuel boost pumps off.) Main fuel filter for visual indication of clogged element condition, evidence of water in filter drain sample, leakage from lines. (Fuel boost pumps on.)
6.11	Exterior lights (navigation, anticollision, landing, search lights) for proper operation.
7.23	Pitot heater for operation (Roof Mount).
8.27	Caution panel lights for illumination on test switch position.

"FOD REMINDER"

CHECK WORK AREA FOR TOOLS AND PARTS AFTER COMPLETION OF MAINTENANCE AND INSPECTION.

Seq. No.	Item and Procedure
8.28	Press to test caution/warning lights.
8.29	Interior lights (dome, cockpit, instrument, console, and pedestal lights) for proper operation.
NOTE	
The following check requires main or spare inverter power. The copilot attitude indicator must be caged and held momentarily when inverter power is applied.	
8.30	Fuel quantity indicator checked with test switch.
8.31	Engine controls for free action through full range and idle stop release.
8.32	Deleted.
8.33	<p>High performance hoist (if installed). Perform hoist inspections, checks and test as required in applicable hoist publications.</p> <p>a. Cable Cutter Connection Check.</p> <p>(1) Cable cutter cartridge electrical connection for security and damage.</p> <p>(2) Electrical connection cable for damage and fraying.</p> <p>(3) Hoist hour meter for reading of a multiple of 2 hours (2, 4, 6, 8, 10, etc.)</p>

Seq. No.	Item and Procedure
NOTE	
If meter indicates a multiple of 2 hours, disconnect cable cutter electrical harness connector. Check internal condition of connector and cable cutter electrical receptacle (especially pins) for corrosion and damage. Reconnect cable cutter electrical harness connector after inspection.	
NOTE	
If hoist is to be removed from aircraft install aluminum shorting strip across pins in cable cutter electrical receptacle on hoist boom and install protective cap.	
b. Cable Cut Switch.	
(1) Cable cut switch on control panel for security and condition of rubber cover.	
NOTE	
Do not lift up cable cut switch guard to check switch unless inspection indicates that further examination is needed.	
(2) Control panel and pilot's cable cut switch guards are down and lockwired.	
c. Hook and Boom Assembly Check.	
(1) Hook assembly for 360 ° freedom of movement about cable.	

"FOD REMINDER"

CHECK WORK AREA FOR TOOLS AND PARTS AFTER COMPLETION OF MAINTENANCE AND INSPECTION.

Seq. No.	Item and Procedure
	<p>(2) Carrier assembly retainer spring clip for proper installation.</p> <p>(3) Hook quick release pin for operation and security.</p> <p>(4) Oil level should be even with mark on sight glass (2).</p> <p>(5) Boom attachment bolts for security.</p> <p>(6) Swivel of boomhead (30° each side of vertical).</p> <p>d. Winch Check.</p> <p>(1) Oil level in sight glass.</p> <p>(2) Gear case for leakage and visible damage.</p> <p>(3) High temperature sensor and sensor cable for installation and fraying.</p> <p>(4) Cable drum opening for FOD and uniform winding of cable.</p> <p>(5) Cam drive - chain guard for security and damage. If guard is broken, make sure that chain is not damaged.</p> <p>(6) Limit switch drive assembly box for security and damage.</p> <p>e. Winch Motor Check.</p> <p>(1) Motor for security and visible damage.</p>

Seq. No.	Item and Procedure
	<p>(2) V-band clamp for installation and security.</p> <p>(3) Power cable for sealant at connector and fraying.</p> <p>f. Control Panel Check.</p> <p>(1) Exterior for visible damage and mount bolts for security.</p> <p>(2) Aircraft position switch for security. and proper setting.</p> <p style="text-align: center;">AVIONICS</p> <p>Perform avionics system inspection, checks and test as required in applicable avionics publications.</p> <p style="text-align: center;">ARMAMENT</p> <p>Perform armament system inspections, checks and test as required in applicable Armament publications.</p> <p style="text-align: center;">FORMS AND RECORDS COMPLETION</p> <p>Ascertain that all entries on forms, records and work sheets have been completed or updated and new forms initiated as required DA PAM 738-751</p> <p style="text-align: center;">NON-STANDARD EQUIPMENT</p> <p>Ascertain that all installed non-standard equipment identified by the applicable airworthiness release's for the aircraft is checked for condition, damage, security as required by the airworthiness releases.</p>

"FOD REMINDER"

CHECK WORK AREA FOR TOOLS AND PARTS AFTER COMPLETION OF MAINTENANCE AND INSPECTION.

By Order of the Secretary of the Army:

E. C. MEYER
General, United States Army
Chief of Staff

OFFICIAL:

ROBERT M. JOYCE
Major General, United States Army
The Adjutant General

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31, PM Maintenance requirements for UH-1D/H and EH-1H aircraft.

"FOD REMINDER"

CHECK WORK AREA FOR TOOLS AND PARTS AFTER COMPLETION OF MAINTENANCE AND INSPECTION.

TM 55-1520-210-PMD

