

DMWR 55-1650-312

DEPOT MAINTENANCE WORK REQUIREMENT
FOR
HYDRAULIC SERVOCYLINDER
PART NO.
1660 SERIES

This publication is not available through U.S. Army Publication Distribution Centers. It must be obtained from U.S. Army Aviation Systems Command, ATTN: AMSAV-MTP, 4300 Goodfellow Boulevard, St. Louis, Mo 63120-1798

THIS PUBLICATION IS A REPRINT OF DMWR 55-1650-312 DATED 1 AUGUST 1979, INCLUDING CHANGES 1 AND 2.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

**U.S. ARMY AVIATION
SYSTEMS COMMAND
1 AUGUST 1979**



.

.



.

.



WARNING

PRECAUTIONARY DATA

Personnel performing instructions involving operations, procedures, and practices which are included or implied in this technical manual shall observe the following instructions. Disregard of these warnings and precautionary information can cause serious injury, death, or an aborted mission.

CLEANING AREA

When using cleaning solvents for cleaning operation, use area with adequate ventilation and no open flames or excessive high temperatures. Solvent flash point must not be less than 100°F.

BREATHING TOXIC VAPORS

Avoid prolonged or repeated breathing of solvent vapors.

COMPRESSED AIR

Do not direct compressed air in close proximity to or directly against skin. Compressed air shall not be used for cleaning purposes except where reduced to less than 30 psi and only then with an effective chip guarding and personnel protection equipment.

PRESSURE TESTS

Test procedures require application of hydraulic pressures to 2250 psi. Use safety shields at all times while performing tests.

USING TOXIC/FLAMMABLE MATERIALS

Due to the toxicity and flammability of the solvents and solutions used in the cleaning procedures, adequate ventilation shall be provided. Avoid prolonged contact with solutions and chemicals. Do not use drycleaning solvent or flammable cleaners near open flame or in areas where high temperatures prevail.

CHANGE }
NO. 2 }

U.S. ARMY AVIATION
SYSTEMS COMMAND
31 August 1992

DEPOT MAINTENANCE
WORK REQUIREMENT

FOR

HYDRAULIC SERVO CYLINDER
PART NUMBER
1660 SERIES

DMWR 55-1650-312, 1 August 1979, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

Cover 1/Cover 2
i and ii
1-1 and 1-2
2-1 and 2-2
4-1 and 4-2
6-1 and 6-2
- - - -

Insert pages


Cover 1/Cover 2
i and ii
1-1 and 1-2
2-1 and 2-2
4-1 and 4-2
6-1/6-2
B-1/B-2

2. Retain this sheet in front of manual for reference purposes.

FOR THE COMMANDER:

GARRETT C. STARR
Colonel, GS
Chief of Staff

OFFICIAL:

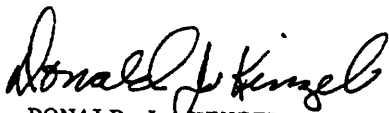

DONALD J. KINZEL
Equipment Publications Control Officer

CHANGE }
NO. 1 }

DMWR 55-1650-312
C 1

US ARMY AVIATION
SYSTEMS COMMAND
12 June 1989

DEPOT MAINTENANCE
WORK REQUIREMENT

FOR

HYDRAULIC SERVO CYLINDER
PART NUMBER
1660 SERIES

DMWR 55-1650-312, 1 August 1979, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by miniature pointing hands.

Remove pages

Cover
a/b

i and ii
1-1 and 1-2
3-3 through 3-7/3-8
5-1 and 5-2
6-1 and 6-2
A-1/A-2

Insert pages


Cover
a/b
A/B
i and ii
1-1 and 1-2
3-3 through 3-8
5-1 through 5-4
6-1 and 6-2
A-1/A-2

2. Retain this sheet in front of manual for reference purposes.

FOR THE COMMANDER:

ROBERT S. YOUNG
Colonel, GS
Chief of Staff

Official:

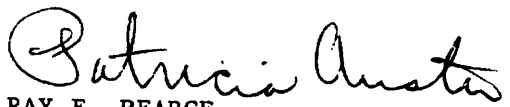
for RAY E. PEARCE
USAAVSCOM Equipment Publications
Control Officer

A/B

Depot Maintenance
Work Requirement
No. 55-1650-312

U.S. ARMY AVIATION
SYSTEMS COMMAND
1 AUGUST 1979

DEPOT MAINTENANCE WORK REQUIREMENT
FOR
HYDRAULIC SERVOCYLINDER
PART NO.
1660 SERIES

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this DMWR. If you find any errors or if you know of a way to improve this DMWR, please let us know. Mail your letter, DA Form 2828 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this DMWR direct to: Commander, U.S. Army Aviation Systems Command, ATTN: AMSAV-MC, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished to you.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

| | Page |
|---|------|
| CHAPTER 1. INTRODUCTION | |
| Section I. General | 1-1 |
| Section II. Description, Data Plates, and Tabulated Data | 1-1 |
| CHAPTER 2. REQUIREMENTS | |
| Section I. General | 2-1 |
| Section II. Standards | 2-1 |
| CHAPTER 3. MAINTENANCE, OVERHAUL, AND REPAIR | |
| Section I. Preshop Analysis | 3-1 |
| Section II. Disassembly | 3-1 |
| Section III. Repair | 3-6 |
| Section IV. Assembly | 3-6 |
| CHAPTER 4. FINAL ASSEMBLY AND TESTING | |
| Section I. General | 4-1 |
| Section II. Final Performance Check | 4-1 |
| CHAPTER 5. QUALITY ASSURANCE/QUALITY CONTROL (QA/QC) REQUIREMENTS | |
| Section I. General | 5-1 |
| Section II. Inspection Requirements | 5-1 |
| CHAPTER 6. PACKAGING | 6-1 |

TABLE OF CONTENTS (Continued)

| | Page |
|---|------|
| APPENDIX A. REFERENCES | A-1 |
| APPENDIX B. REPAIR PARTS AND SPECIAL TOOLS LIST | B-1 |

LIST OF ILLUSTRATIONS

| Figure | Title | Page |
|--------|---|------|
| 1-1 | Hydraulic Servocylinder, Part No. 1660 Series (Typical) | 1-2 |
| 1-2 | Stamping and/or Replacement of Data Plate | 1-3 |
| 3-1 | Hydraulic Servocylinder, Part No. 1660 Series (Typical) Exploded View . | 3-2 |
| 6-1 | Deleted | |

LIST OF TABLES

| Number | Title | Page |
|--------|--|------|
| 1-1 | Leading Particulars | 1-4 |
| 2-1 | Expendable Supplies and Consumable Materials | 2-1 |
| 3-1 | Inspection Criteria | 3-5 |
| 4-1 | Troubleshooting Chart | 4-2 |

Page iii/iv has been deleted

LIST OF ILLUSTRATIONS

| Figure | Title | Page |
|--------|--|------|
| 1-1 | Hydraulic Servocylinder, Part No. 1660 Series (Typical)..... | 1-2 |
| 1-2 | Stamping and/or Replacement of Data Plate..... | 1-3 |
| 3-1 | Hydraulic Servocylinder, Part No. 1660 Series (Typical) Exploded View..... | 3-2 |
| 6-1 | Preservation, Packaging, Packing and Marking Requirements (Form 1512)..... | 6-2 |

LIST OF TABLES

| Number | Title | Page |
|--------|---|------|
| 1-1 | Leading Particulars..... | 1-4 |
| 2-1 | Expendable Supplies and Consumable Materials..... | 2-1 |
| 3-1 | Inspection Criteria..... | 3-5 |
| 4-1 | Troubleshooting Chart..... | 4-2 |

CHAPTER 1 INTRODUCTION

Section I. GENERAL

- 1-1. **Scope.** These instructions are for use by depot/contractor personnel. They apply to hydraulic servocylinder, 1660 series (fig. 1-1). used on AH-1 and UH-1 series helicopters, and in case of conflict, take precedence over all other documents pertinent to their overhaul and inspection.
- 1-2. **Deviations and Exceptions.** When any work segment as set forth in this DMWR cannot be accomplished, or can be accomplished only in a manner other than specified, the contractor shall submit a Request for Action form, AMSAV-M Form 1379, through the Contracting Officer to AMSAV-MC with a copy to AMSAV-MD. If the problem is publications related or requires a change to a publication, a DA Form 2028 shall also accompany the Request for Action. The request for action shall state the problems, the reasons for urgency, and the following specifics:
- a. Serial number (if applicable), part number, and NSN of affected equipment.
 - b. Work elements which will not be completed or which will not be accomplished exactly as specified herein.
 - c. Reason for nonaccomplishment or deviation.
 - d. Action taken to correct condition causing nonaccomplishment or need for deviation.
 - e. Data relative to availability of parts required, if applicable.
 - f. Estimated man hours.
 - g. Instructions and inspection required to maintain the integrity of the end item because of such omission or deviation.
- 1-3. **Maintenance Forms and Records.** Maintenance forms, records, and reports which are to be used by depot maintenance personnel are listed in and prescribed by DA Pam 738-751.
- 1-4. **Reporting Equipment Improvement Recommendations (EIRs).** EIRs can and must be submitted by anyone who is aware of an unsatisfactory condition with the equipment design or use. It is not necessary to show a new design or list a better way to perform a procedure, just simply tell why the design is unfavorable or why a procedure is difficult. EIRs may be submitted on SF Form 368 (Quality Deficiency Report). Instructions for preparing EIRs are provided in DA Pam 738-751. Mail directly to Commander, U.S. Army Aviation Systems Command, ATTN: AMSAV-QRF, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will furnished directly to you.

Section II. DESCRIPTION, DATA PLATES, AND TABULATED DATA

- 1-5. **Description.** The hydraulic servo-cylinder consists of a piston, cylinder, and a servo valve body with a fixed end. Both pressure and return ports located in the servo valve body are for standard AND fittings. The hydraulic servo cylinder is used to reduce the manual effort required for control of the variable pitch tail rotor of a helicopter by converting hydraulic pressure to mechanical force.
- 1-6. **Data Plates.** Stamping and/or replacement of data plate when applicable is necessary to provide convenient record of overhaul or modification and operating time that will at all times accompany equipment (fig. 1-2).

1-7. Tabulated Data. The major characteristics of the hydraulic servocylinder are listed in table 1-1.

1-8. Modification Criteria. The hydraulic servocylinder, part no. 1660-9 will be modified to a -17 configuration and part no. 1660-11 and 1660-15 will be modified to a -23 configuration after disassembly, inspection and lubrication procedures. Modification will take place as follows:

a. Refer to parts list (fig. 3-1) Usable on Code column for parts applicable.

b. Build up hydraulic servocylinder using only components parts showing applicable usable on code.

c. Reidentify applicable hydraulic servocylinder to part no. 1660-17 or -23 configuration.


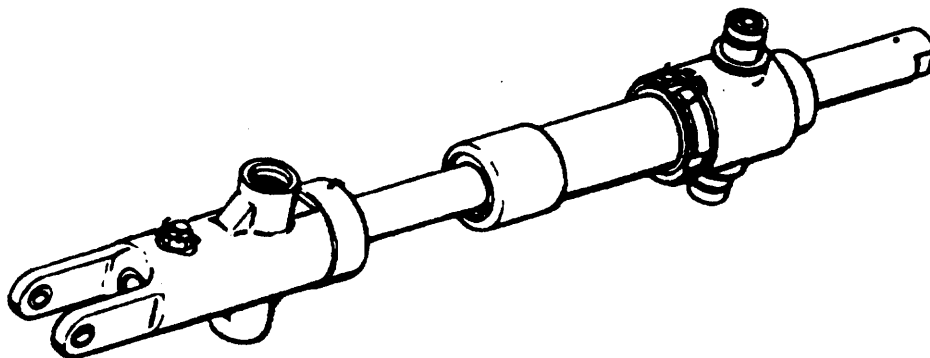


Figure 1-1. Hydraulic Servocylinder, Part No. 1660 Series (Typical).

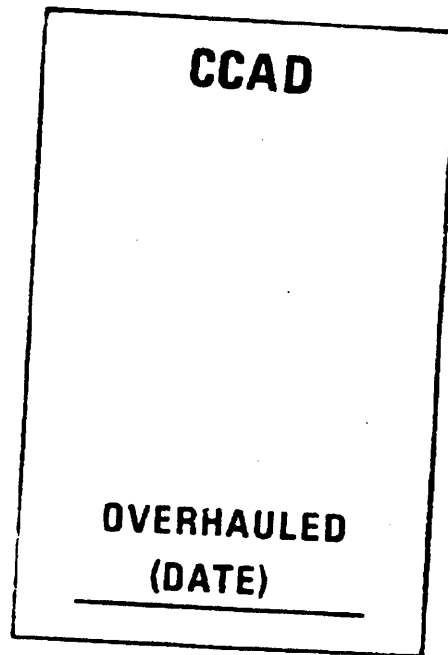

TS 1650-312/1-2

Figure 1-2. Stamping and/or Replacement of Data Plate

Table 1-1. Loading Particulars

| | |
|--|---|
| Pressure Data: | |
| Operating | 1500 psig (105.6 kg/sq cm) |
| Proof | 2250 psig (158.3 kg/sq cm) |
| Burst | 3750 psig (263.9 kg/sq cm) |
| Cylinder Stroke | 3.500 to 3.540 in. (8.89 to 8.992 cm) |
| Effective Area | 0.38 in. ² (2.45 sq/cm) |
| Port Data: | |
| PRESS | per AND 10050-4 for 1/4 in. tube |
| RET | per AND 10050-5 for 5/16 in. tube |
| Servo Valve Data: | |
| Servo Valve Stroke from Neutral | ±0.035 in. (±0.089 cm) |
| CYL 1 and CYL 2 to RET | 0.004 to 0.006 in. (0.010 to 0.015 cm) overlap |
| PRESS to CYL 1 and CYL 2 | 0.001 to 0.002 in. (0.003 to 0.005 cm) underlap |
| Pilot Input Force (after static for 5 minutes and 1500 psi) (105.6 kg/sq cm) | 2.5 lb (1.14 kg) (max.) |
| Pilot Load on Valve | 1000 lb (454 kg) (max.) |
| Breakout Force (Ports Open) | 5.0 lb (2.27 kg) (max.) (P/N1660-9,11,-15) 10.0 lb (4.54 kg) (max.) (P/N1660-17,-23) |
| Over-all Dimensions (approx): | |
| Length | 14 in. (35.6 cm) |
| Width | 1.5 in. (3.8 cm) |
| Height | 2.56 in. (6.50 cm) |
| Weight (Dry) | 1.75 lb (max.) (0.79 kg) |
| Operating Medium | Hydraulic fluid, MIL-H-83282A |
| Operating Temperature Range | -53.9° C to +82.2° C (-65° F to +180° F) |

CHAPTER 2
REQUIREMENTS

Section I. GENERAL

2-1. Facilities. The contractor's facilities shall be equipped to perform all phases of overhaul and retest as specified in this DMWR.

2-2. Special Tools. No special tools are required.

2-3. Test Equipment. Test equipment will be required which meets specifications outlined in paragraph 4-1.

2-4. Expendable Supplies and Consumable Materials List. The supplies and materials required to repair or overhaul the hydraulic servocylinder are listed in table 2-1. The latest revision including

amendments, changes to specifications that are in effect on date work is initiated on hydraulic servocylinder are applicable.

2-5. Repair Parts. Repair parts and replacement parts as needed for overhaul appear in Chapter 3, Section II of this DMWR.

NOTE

The component parts will include a Usable on Code to indicate the items that are used on certain hydraulic servocylinders. The absence of a Usable on Code indicates the item is applicable to all hydraulic servocylinder configurations.

Section II. STANDARDS

2-6. Quality of Materials. Parts and materials used for replacement, repair, or modification shall meet equipment drawings and specifications.

2-7. Wear Limits, Fits, and Tolerances. Wear limits, fits, and tolerances listed in table 3-1 and

throughout this DMWR shall be complied with unless otherwise stated in the contract/work directive.

2-8. Flight Safety Parts Program. This DMWR is not impacted by the Flight Safety Parts Program.

Table 2-1. Expendable Supplies and Consumable Materials

| ITEM NO. | MATERIAL | TYPE OR GRADE | GOVERNMENT SPECIFICATION |
|----------|--------------------------------|-----------------|--------------------------|
| 1 | Hydraulic Fluid | | MIL-H-83282A |
| 2 | Hydraulic Fluid (Preservative) | | MIL-H-6083D |
| 3 | Drycleaning Solvent | | P-D-680 (2) |
| 4 | Crocus Cloth | No. 600 | P-C-458C |
| 5 | Polishing Cloth | No. 7/0 | P-C-451E |
| 6 | Waterproof Paper | Type 1, Grade A | MIL-B-121E |
| 7 | Technical Petrolatum | | VV-P-236A |
| 8 | Primer, Zinc Chromate | | MIL-P-8585A |
| 9 | Paint, Aluminum | | MIL-P-14276 |

CHAPTER 3 MAINTENANCE, OVERHAUL AND REPAIR

Section I. PRESHOP ANALYSIS

3-1. Purpose. Preshop analysis instructions are provided as a guide to examination of the incoming hydraulic servocylinder. Information obtained from this examination should be used by the overhaul facility in preparing estimates needed to determine extent of repair, modification and replacement needed to perform overhaul of the hydraulic servocylinder in order to make it a completely serviceable item. Detailed cleaning and corrosion treatment methods appear in this DMWR. Items pending performance of maintenance shall be preserved to prevent damage or deterioration.

3-2. Unpacking. Remove hydraulic servocylinder from shipping container. Physically check all tags and forms to determine reason for removal from service. Also determine what modifications have not been accomplished.

NOTE

Tags and forms received with the hydraulic servocylinder should not be removed.

a. General Disassembly Procedures. Disassembly and a physical check are required when the hydraulic servocylinder to be overhauled was removed from service for any of the following reasons:

- (1) Internal failure.
- (2) Expiration of approved operating time interval; or time unknown or estimated.

(3) Visible physical damage.

b. Required Disassembly Procedures. When it has been determined that the hydraulic servocylinder will need disassembly, proceed as follows:

(1) Refer to Notes, Cautions, and Warnings in DMWR.

(2) Parts of the hydraulic servocylinder should be tagged and/or kept together so that wear condition of parts can be evaluated during inspection. Matched parts shall be tagged, handled, and stored together to preclude damage and to ensure reassembly and installation in their matched position.

(3) Record and tag parts that are defective with the reason for rejection.

NOTE

Exclude parts which are normally replaced at every overhaul such as packing, gaskets and seals.

(4) Used components and refinished parts recovered as products of disassembly will be examined 100% by the contractor to determine serviceability.

c. Refer to paragraph 3-5 for disassembly procedures.

3-3. In-Process Inspection. The inspection procedures are contained in paragraph 3-7.


Section II. DISASSEMBLY

3-4. General. The following instructions are issued with the understanding that all lockwire will be removed where necessary, and parts such as bushings which are not normally removed at overhaul, but are removed on condition as deemed necessary by inspection, are classified as repairs and are covered under the repair and replacement section. Figure 3-1 is an exploded view illustration with an associated group parts list used for disassembly of the hydraulic servocylinder.

3-5. Disassembly Procedures.

NOTE

Use a clean working area for disassembly. As parts are removed, place in a clean container for protection against dirt and rough handling. If unit is to remain disassembled for a considerable length of time, protect parts from moisture by immersing in preservative hydraulic fluid (item 2, table 2-1).

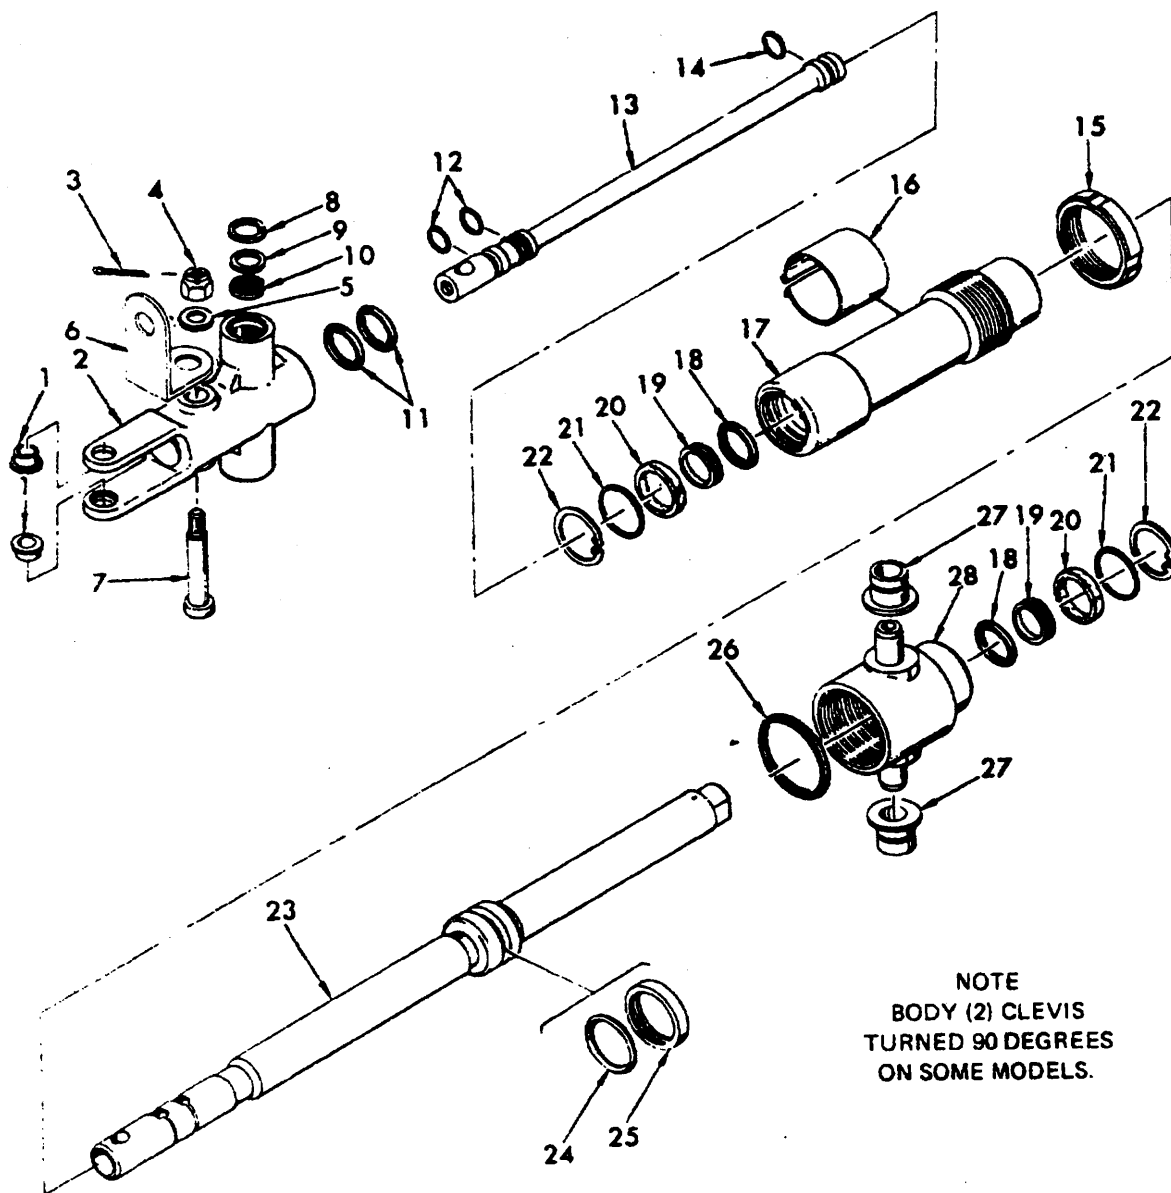

TS 1650-312/3-1

Figure 3-1. Hydraulic Servocylinder, Part No. 1650 Series (Typical), Exploded View

Parts list for figure 3-1.

| FIGURE & INDEX NO. | PART NUMBER | | | | | | | | DESCRIPTION | UNITS PER ASSY | USABLE ON CODE |
|--------------------------|-------------|---|---|---|---|---|---|---|------------------------------------|----------------------|----------------------|
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | | | |
| 3-1 | 1660-9 | | | | | | | | Hydraulic Servocylinder Assy | | A |
| | 1660-11 | | | | | | | | Hydraulic Servocylinder Assy | | B |
| | 1660-15 | | | | | | | | Hydraulic Servocylinder Assy | | C |
| | 1660-17 | | | | | | | | Hydraulic Servocylinder Assy | | D |
| | 1660-23 | | | | | | | | Hydraulic Servocylinder Assy | | E |
| | No Number | | | | | | | | Shaft and Body | 1 | ABC |
| | 8941 | | | | | | | | Shaft and Body | 1 | D |
| | 8951 | | | | | | | | Shaft and Body | 1 | E |
| -1 | 8382 | | | | | | | | Bushing | 1 | |
| -2 | 8304-1 | | | | | | | | Body | 2 | |
| | 8938 | | | | | | | | Body | 1 | ABC |
| | 8948 | | | | | | | | Body | 1 | D |
| -3 | MS24665-151 | | | | | | | | Pin, Cotter | 1 | E |
| -4 | AN310-3 | | | | | | | | Nut | 1 | |
| -5 | AN960C10 | | | | | | | | Washer | 1 | |
| | AN960C10L | | | | | | | | Washer | 1 | AD |
| -6 | 20-032-1 | | | | | | | | Bracket | 1 | BCE |
| -7 | 1238 | | | | | | | | Bolt | 1 | BCE |
| -8 | MS16629-37 | | | | | | | | Ring, Retaining | 1 | |
| -9 | 8314 | | | | | | | | Washer | 1 | |
| -10 | 8452 | | | | | | | | Filter | 1 | |
| -11 | MS28775-016 | | | | | | | | Packing, Preformed | 1 | |
| | 8907 | | | | | | | | Packing, Preformed | 2 | ABC |
| -12 | MS28775-011 | | | | | | | | Packing, Preformed | 2 | DE |
| -13 | 8309 | | | | | | | | Tube Assembly | 2 | |
| | 8937 | | | | | | | | Tube Assembly | 1 | ABC |
| N/S | 8908 | | | | | | | | Tube | 1 | DE |
| N/S | 187001 | | | | | | | | Lee Plug | 1 | DE |
| -14 | MS28775-010 | | | | | | | | Packing, Preformed | 1 | DE |
| -15 | 1235 | | | | | | | | Jam Nut | 1 | |
| -16 | 1665-9 | | | | | | | | Name Plate | 1 | |
| | 1665-11 | | | | | | | | Name Plate | 1 | A |
| | 1665-15 | | | | | | | | Name Plate | 1 | B |
| | 1665-17 | | | | | | | | Name Plate | 1 | C |
| | 1665-23 | | | | | | | | Name Plate | 1 | D |
| -17 | 1364 | | | | | | | | Barrel | 1 | E |
| -18 | MS28775-114 | | | | | | | | Packing, Preformed | 1 | |
| -19 | 9025-114 | | | | | | | | Channel Seal | 2 | |
| -20 | S110065-3T | | | | | | | | Scraper Ring | 2 | DE |
| -21 | 1207 | | | | | | | | Washer | 2 | |
| -22 | MS16625-93 | | | | | | | | Ring, Retaining | 2 | |
| -23 | 8318 | | | | | | | | Shaft | 2 | |
| | 8939 | | | | | | | | Shaft | 1 | ABC |
| -24 | 8258 | | | | | | | | Ring Seal | 1 | DE |
| | 8258-19 | | | | | | | | Packing, Preformed | 1 | ABC |
| -25 | 8266-19 | | | | | | | | Cap Seal | 1 | DE |
| -26 | AN6227-20 | | | | | | | | Packing, Preformed | 1 | |
| | MS28775-215 | | | | | | | | Packing, Preformed | 1 | ABC |
| -27 | 1289 | | | | | | | | Bushing | 1 | DE |
| -28 | 1329 | | | | | | | | Head | 2 | |
| | | | | | | | | | | 1 | |

N/S - Not Shown

a. Disassemble hydraulic servo-cylinder as shown in figure 3-1. Discard all packings, cotter pin, scraper rings, retaining rings and seals during each overhaul.

NOTE

Bracket (6) is not used on P/N 1660-17.

b. Remove cotter pin (3), nut (4), washer (5) and bracket (6). Remove bolt (7) from body (2).

CAUTION

Shaft and body assembly (23 and 2, fig. 3-1) are select-fit, matched, and precision lapped parts. If either part is damaged, the complete assembly must be replaced as a single unit. Use extreme caution when handling to prevent damage to grooves and adjacent surfaces. Wrap parts after disassembly for protection and retain in set.

c. Slide body (2) off of shaft (23).

NOTE

If filter (10) is damaged, remove retaining ring (8), washer (9) and filter.

d. Remove preformed packings (11) from body (2).

e. Cut lockwire and loosen jam nut (15) from barrel (17) and separate barrel from head (28).

f. Remove packing (26) from head (28).

g. Remove shaft (23) and tube assembly (13) from shaft. Remove preformed packings (12 and 14).

h. Remove cap seal (25) and preformed packing or ring seal (24).

i. Remove retaining rings (22), washers (21), scraper rings (20), channel seals (19) and preformed packings (18) from both barrel (17) and head (28).

NOTE

Channel seals (19) are not used on P/N 1660-9, -11, and -15.

NOTE

Do not remove bushings (1) from body (2), bushings (27) from head (28), or name plate (16) unless replacement is necessary.

WARNING

Drycleaning solvent, P-D-680, used to clean parts is potentially dangerous to personnel and property. Avoid repeated prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100 degrees F to 138 degrees (38 degrees C to 59 degrees C).

CAUTION

Do not drop body (2) or shaft (23) into container of cleaning solvent. Hand hold to prevent damage to precision-machined surfaces.

3-6. Cleaning.

a. Immerse and wash all metallic parts in drycleaning solvent, (item 8, table 2-1). Pay particular attention to passages and threaded areas. Remove stubborn dirt with a stiff-bristled, nonmetallic brush moistened in solvent.

WARNING

Do not direct compressed air against skin.

b. Dry all parts with dry compressed air not in excess of 15 psig (1.06 kg/sq cm).

c. If components are not to be used immediately after cleaning, flush all parts with preservative hydraulic fluid (item 2, table 2-1) and place plastic bag and dust-free containers.

NOTE

"The use of any alcohol in cleaning components which contact hydraulic fluids is prohibited. Formation of polymeric residue can result, which could impair mechanical operation of the component."

3-7. Inspection.

a. Inspect all surfaces and threaded areas for damage, signs of wear, burrs, cross-threading, scoring, nicks, and/or corrosion. (Refer to table 3-1.)

NOTE

Excessive wear is defined as any obvious deformation or deterioration of parts which may render the unit inoperative. If doubt exists concerning the serviceability of a part, replace the part.

b. Mating surfaces and grooves on shaft (23, fig. 3-1) and body (2) must be smooth and free of scratches, scoring, feathered edges, and damage from corrosion.

Table 3-1. Inspection Criteria

| FIG & INDEX NUMBER | NOMENCLATURE | INSPECT FOR | METHOD OF INSPECTION | REMARKS |
|--------------------|--------------|--|----------------------|-----------------------|
| 3-1 | Bushing | ID wear 0.252 inch maximum | SIE | Ref para 3-8c. |
| -1 | Bushing | ID wear 0.252 inch maximum | SIE | Ref para 3-8c. |
| -2 | Body | Thread damage | Visual | Ref para 3-8a. |
| | | Superficial damage and corrosion | Visual | Ref para 3-8b. |
| | | Cracks and distortion | Visual | Ref para 3-8c. |
| -7 | Bolt | Damaged threads and corrosion | Visual | Ref para 3-8a. and b. |
| -13 | Tube | Cracks, distortion superficial damage | Visual | Ref para 3-8b. and c. |
| -15 | Jamnut | Thread damage | Visual | Ref para 3-8a. |
| | | Crack distortion and superficial damage | Visual | Ref para 3-8c. |
| -17 | Barrel | Major ID 0.9405 inch max | SIE | Ref para 3-8c. |
| | | Minor ID 0.6275 inch max | SIE | |

Table 3-1. Inspection Criteria (Continued)

| FIG & INDEX NUMBER | NOMENCLATURE | INSPECT FOR | METHOD OF INSPECTION | REMARKS |
|--------------------|--------------|---|----------------------|-----------------------|
| -23 | Shaft | Thread damage | Visual | Ref para 3-8a. |
| | | Cracks, distortion and superficial damage | Visual | Ref para 3-8b. and c. |
| | | Barrel and cap seal contact area diameter 0.6225 to 0.6235 inch | SIE | |
| | | Thread damage | Visual | Ref para 3-8a. |
| | | Cracks and distortion | Visual | Ref para 3-8b. and c. |
| -27 | Bushing | OD 0.498 minimum | SIE | Ref para 3-8c. |
| -28 | Head | ID 0.6275 maximum | SIE | Ref para 3-8c. |
| | | Thread damage | Visual | Ref para 3-8a. |
| | | Cracks, distortion and superficial damage | Visual | Ref para 3-8b. and c. |

c. Check identification plate (16) for security of attachment and legibility.

d. Examine parts for wear in excess of allowable wear limits as specified in table 3-1.

chipped. Wear on body (2) is acceptable if cylinder assembly leakage is within limits as specified in final test procedures.

e. Make visual check, using 10-power glass, of all radii and corners.

NOTE

Wear on shaft (23) is acceptable if chrome plating is not worn through or is

Section III. REPAIR

3-8. Component Replacement and Repair.

a. Repair or replace all parts which are defective. Do not attempt to repair delicate parts or surfaces. Replace damaged parts rather than attempt difficult or extensive repairs.

b. Except for critical surfaces (lapped parts) on body (2, fig. 3-1)

and shaft (23), polish out minor scoring on nonsealing and nonbearing ferrous parts with crocus cloth, (item 4, table 2-1), or equivalent. Use polishing cloth, (item 5, table 2-1) or equivalent, to polish out minor scoring on aluminum parts. Thoroughly clean any polished parts. (Refer to paragraph 3-6.)

c. Replace any parts not repairable by minor polishing and any part worn beyond the allowable wear limits specified in table 3-1.

NOTE

Body (2, fig. 3-1) and shaft (23) are precision-matched parts. If

either body or shaft replacement, replace them as an assembly.

d. Replace all packings, cotter pin, scraper rings, and retaining rings whenever these parts are removed during assembly.

Section IV. ASSEMBLY

3-9. Lubrication. Lubricate all internal parts at final assembly in hydraulic fluid (item 1, table 2-1) and lubricate all preformed packings with technical petrolatum (item 7, table 2-1) prior to installation.

3-10. Reassembly and Testing of Assemblies. (Refer to Chapter 4.)

3-11. Painting Requirements. The hydraulic servocylinder is painted after all tests are complete and cylinder has been flushed with preservative hydraulic fluid. Wipe all surfaces to be painted with solvent (item 3, table 2-1) using a clean, lint-free cloth.

WARNING

Drycleaning solvent, P-D-680, used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100 degrees F to 138 degrees F (38 degrees C to 59 degrees C).

Tape all exposed sliding surfaces and proceed as follows:

a. Spray paint with zinc chromate primer (item 8, table 2-1) and allow to dry.

b. Apply final spray coat of aluminum paint (item 9, table 2-1).

3-12. Reassembly Procedures.

NOTE

Coat all internal parts with clean hydraulic fluid (item 1, table 2-1), to facilitate reassembly.

a. If removed, press new bushings (1, fig. 3-1) into body (2) and bushings (27) onto head (28).

b. When installing packings:

(1) Visually inspect new packings for cuts nicks or flaws and discard when any evidence of these defects are present.

(2) Ensure that packings are of proper size. Uniform pressure on packings when installed is necessary for satisfactory operation of servocylinder and to prevent leakage.

(3) Lubricate preformed packings with petrolatum, (item 7, table 2-1) prior to installation.

(4) When installing packings, extreme care must be exercised to prevent packing from being cut or scratched on threads or sharp corners. Carefully roll or rotate packings within their grooves to remove twisting.

NOTE

Ensure retaining ring is installed with flat side outboard.

c. Install preformed packings (18), channel seals (19), scraper rings (20) and washers (21) and secure with retaining ring (22); in both head (28) and barrel (17).

NOTE

Channel seals (19) are not used on P/N 1660-9, -11, and -15.

d. Install preformed packing (26) into head (28).

e. Assemble ring seal on preformed packing (24) and cap seal (25) onto shaft (23).

f. Install preformed packings (12 and 14) on tube assembly (13) and insert tube into shaft (23).

CAUTION

Use care when torquing jam nut to preclude damage to barrel (17) and head (28).

g. Install barrel (17) and head (28) on shaft (23) and fasten together with jam nut (15). Torque jam nut to 200-250 in-lb. Lockwire after testing.

h. Install preformed packings (11) in body (2) and, if removed, install filter (10), washer (9) and retaining ring (8).

i. Install body (2) on shaft (23). Insert shoulder bolt (7) through body and shaft and install bracket (6), washer (5), nut (4) and cotter pin (3).

NOTE

Bracket (6) is not used on P/N 1660-17.

j. Install new nameplate (16) if necessary, after testing and painting.

CHAPTER 4

FINAL ASSEMBLY AND TESTING

Section I. GENERAL

4-1. Pretest Conditions and Procedures.

a. Pretest Conditions. Pretest condition shall be as follows:

(1) Hydraulic fluid (item 1, table 2-1) conforms to MIL-H-83282.

(2) Hydraulic fluid continuously filtered to

10 microns at pressures up to 2250 psig (158.3 kg/sq cm) at 26.7°C to 43.0°C (80°F to 110°F) as test medium.

b. Test Equipment. Hydraulic test stand capable of delivering hydraulic fluid continuously filtered to 10 microns, at pressures up to 2250 psig (158.3kg/sq cm) at 26.7°C to 43.0°C (80°F to 110°F).

Section II. FINAL PERFORMANCE CHECK

4-2. Test Procedures.

a. Install cylinder assembly in hydraulic test stand and flush all air from cylinder before testing.

b. There shall be no external leakage with the cylinder at midstroke and with the servo valve in neutral position with 2250 psig applied to the pressure port and 0 psig at return port for a period of 3 minutes.

c. Observe cylinder assembly for any evidence of loosening or permanent deformation of parts of unit.

d. Reduce hydraulic pressure to 1500 psi (105.5 kg/sq cm) for the optional test.

e. Actuate the cylinder through 25 cycles by operating the servo valve body and observe that there is no leakage from any joint or boss.

f. Check that leakage at external packings is no greater than one drop during the 25 cycles.

g. Using a 0-5 pound (0-2.3 kg) spring scale, check that the force required to move the servo valve body does not exceed 2.5 pounds (1.1 kg).

h. For leakage test, apply 1500 psi (105.5 kg/sq cm) hydraulic pressure to the pressure port and measure leakage from the return port under the following conditions:

(1) With cylinder at midstroke and the servo valve in neutral, check that leakage from the return port does exceed 100 cc/min.

(2) With the servo valve in full extend position and the cylinder fully extended, check that leakage from the return port does not exceed 100 cc/min.

(3) With the servo valve in full retract position and the cylinder fully retracted, check that leakage from the return port does not exceed 100 cc/min.

(4) Reverse line connections to remove pressure from the pressure port. Apply 50 psi (3.5 kg/sq cm). pressure to the return port.

(5) Check that combined leakage from the servo valve ends does not exceed one drop in 20 minutes.

4-3. Trouble Analysis. If any malfunction or leakage is observed during tests, refer to table 4-1, troubleshooting chart, for probable cause and remedy. Replace parts if required and repeat all test procedures.

4-4. Post Test Procedures.

a. After satisfactory completion of all tests drain hydraulic fluid from assembly.

b. Cap all ports.

Table 4-1. Troubleshooting Chart

| TROUBLE | PROBABLE CAUSE | REMEDY |
|---|---|--|
| Leakage during test procedure step h (1). | Faulty shaft and/or body | Replace shaft (23, fig. 3-1) and body (2). |
| Leakage during test procedure, steps h (2) and h (3). | Faulty shaft and/or body | Replace shaft (23) and body (2). |
| | Tube packings (12) or packing (24) nicked | Replace packings as required. |
| Leakage from either end piston | Faulty packings | Replace packings as required. |
| Excessive force required to move barrel | Shaft in barrel binding | Replace barrel (17) and/or shaft (23) and body (2) and/or head (28). |
| Valve travel check out of limits | Faulty shaft and/or body | Replace shaft (23, fig. 3-1) and body (2) and retest. |